



SAMSUNG

PDP (PLASMA DISPLAY PANEL) DIGITAL TELEVISION

Owner's Instructions

Before operating the unit,
please read this manual thoroughly,
and retain it for future reference.

ON-SCREEN MENUS

Picture In Picture (PIP)

Colour Weakness Enhancement Mode

My Colour Control

TELETEXT (Option)



SRS TruSurroundXT



Digital Natural Image engine

Digital Terrestrial Receiver

This device is a Class B digital apparatus.

Register your product at www.samsung.com/global/register

User Instructions

◆ **Screen Image retention**

Do not display a still image (such as on a video game or when hooking up a PC to this PDP) on the plasma monitor panel for more than 2 hours as it can cause screen image retention. This image retention is also known as "screen burn". To avoid such image retention, reduce the degree of brightness and contrast of the screen when displaying a still image.

◆ **Height**

The PDP can normally operate only under 2000m in height. It might abnormally function at a place over 2000m in height so do not install and operate there.

◆ **Heat on the top of the PDP TV**

The top side of the product may be hot after long periods of use as heat dissipates from the panel through the vent hole in the upper part of the product.

This is normal and does not indicate any defect or operation failure of the product.

However, children should be prevented from touching the upper part of the product.

◆ **The product is making a 'cracking' noise.**

A 'cracking' noise may occur when the product contracts or expands due to a change of surrounding environment such as temperature or humidity. This is normal and not a defect of the unit.

◆ **Cell Defects**

The PDP uses a panel consisting of 1,230,000(SD-level) to 3,150,000(HD-level) pixels which require sophisticated technology to produce. However, there may be few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.

◆ **Avoid operating the TV at temperatures below 5°C(41°F)**

◆ **A still image displayed too long may cause permanent damage to the PDP Panel.**



Watching the PDP TV in 4:3 format for a long period of time may leave traces of borders displayed on the left, right and centre of the screen caused by the difference of light emission on the screen.

Playing a DVD or a game console may cause similar effect to the screen.

Damages caused by the above effect are not covered by the Warranty.

◆ **Afterimage on the Screen.**

Displaying still images from Video games and PC for longer than a certain period of time may produce partial afterimages.

To prevent this effect, reduce the 'brightness' and 'contrast' when displaying still images.

◆ **Warranty**

- Warranty does not cover any damage caused by image retention.
- Burn-in is not covered by the warranty.

◆ **Installation**


Be sure to contact an authorized service centre, when installing your set in a location with heavy dust, high or low temperatures, high humidity, chemical substance and where it operates continually such as the airport, the train station etc.

Failure to do so may cause a serious damage to your set.


Checking Parts



Owner's Instructions

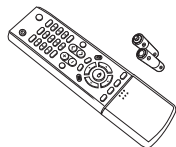


Remote Control/
AAA Batteries

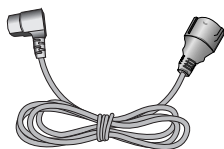

Power Cord


Sold Separately

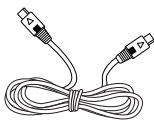


S-VIDEO Cable




HDMI Cable

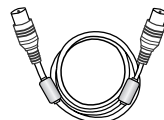

Antenna Cable

 


Component Cables
(RCA)

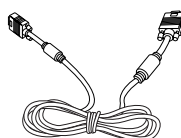


PC Cable



 Scart Cable



PC Audio Cable

 

HDMI/DVI Cable

Contents

| | |
|---|----|
| ◆ FOREWORD | |
| ■ User Instructions | 2 |
| ◆ CONNECTING AND PREPARING YOUR DISPLAY | |
| ■ Control Panel..... | 6 |
| ■ Infrared Remote Control | 8 |
| ■ Inserting the Batteries in the Remote Control | 9 |
| ■ Assembling the Stand-Base..... | 9 |
| ■ Installing the Display on the Wall Attachment Panel..... | 10 |
| ■ Connecting to an Aerial or Cable Television Network | 12 |
| ■ Connecting a Satellite Receiver or Decoder | 12 |
| ■ Switching Your Television On and Off..... | 13 |
| ■ Familiarizing Yourself with the Remote Control | 14 |
| ■ Plug & Play Feature..... | 15 |
| ■ Choosing Your Language | 16 |
| ◆ SETTING THE CHANNELS (ANALOG TV) | |
| ■ Storing Channels Automatically | 17 |
| ■ Storing Channels Manually | 18 |
| ■ Skipping Unwanted Channels | 20 |
| ■ Sorting the Stored Channels | 21 |
| ■ Assigning Names to Channels..... | 22 |
| ■ Locking the Channel | 23 |
| ■ Using the LNA (Low Noise Amplifier) Feature | 24 |
| ■ Fine Tuning Channel Reception | 25 |
| ◆ USING YOUR DISPLAY | |
| ■ Displaying Information | 26 |
| ■ Changing the Picture Standard..... | 26 |
| ■ Customizing the Picture Settings | 27 |
| ■ Setting the Picture (PC Mode) | 28 |
| ■ Selecting the Picture Size..... | 30 |
| ■ Viewing the DNIe Demonstration..... | 31 |
| ■ Freezing the Current Picture | 31 |
| ■ Setting the My Colour Control (Easy Control) | 32 |
| ■ Setting the My Colour Control (Detail Control) | 33 |
| ■ Setting the Blue Screen..... | 34 |
| ■ Using the Colour Weakness Enhancement Feature | 35 |
| ■ Using the Energy Saving Feature..... | 36 |
| ■ Viewing the Picture in Picture (PIP) | 37 |
| ■ Using the Digital NR (Noise Reduction) Feature | 40 |
| ■ Preventing Screen Burn-in | 41 |
| ■ Reducing the Effects of Screen Burn..... | 42 |
| ■ Changing the Sound Standard..... | 43 |
| ■ Customizing the Sound Settings..... | 44 |
| ■ Adjusting the Volume Automatically | 44 |
| ■ Setting the TruSurround XT | 45 |
| ■ Selecting the Internal Mute..... | 46 |
| ■ Setting the Melody Sound | 46 |
| ■ Selecting the Sound Mode (depending on the model) | 47 |
| ■ Setting and Displaying the Current Time..... | 48 |
| ■ Setting the Sleep Timer | 49 |
| ■ Switching the Television On and Off Automatically | 50 |
| ■ Viewing an External Signal Source..... | 52 |
| ■ Redirecting an Input to the External Output | 53 |

Contents (continued)

| | |
|---|----|
| ◆ USING THE DTV FEATURE | |
| ■ Previewing the DTV Menu System..... | 54 |
| ■ Updating the Channel List Automatically..... | 55 |
| ■ Updating the Channel List Manually..... | 56 |
| ■ Editing Your Favourite Channels..... | 57 |
| ■ Viewing Channel Lists..... | 60 |
| ■ Displaying Programme Information..... | 60 |
| ■ Viewing the EPG (Electronic Programme Guide) Information..... | 61 |
| ■ Using the Scheduled List..... | 62 |
| ■ Setting the Default Guide..... | 63 |
| ■ Viewing All Channels and Favourite Channels..... | 64 |
| ■ Selecting Category Colours..... | 65 |
| ■ Adjusting the Translucency Level..... | 66 |
| ■ Setting up the Parental Lock..... | 67 |
| ■ Using the Preferred Features..... | 68 |
| ■ Checking the Product Information..... | 69 |
| ■ Checking the Signal Information..... | 69 |
| ■ Upgrading the Software (Option)..... | 70 |
| ■ Viewing Common Interface..... | 71 |
| ■ Selecting the CI (Common Interface) Menu..... | 72 |
| ■ Resetting..... | 73 |
| ■ Freezing the Current Picture..... | 73 |
| ◆ USING THE TELETEXT FEATURE | |
| ■ Teletext Feature..... | 74 |
| ■ Displaying the Teletext Information..... | 75 |
| ■ Selecting Display Options..... | 76 |
| ■ Selecting a Teletext Page..... | 77 |
| ◆ ADDITIONAL INFORMATION AND CONNECTIONS | |
| ■ Connecting to External Input/Output..... | 78 |
| ■ Connecting to the AV Output..... | 79 |
| ■ Connecting to the RCA Input..... | 80 |
| ■ Connecting to the S-Video Input..... | 80 |
| ■ Connecting to the Component Input..... | 81 |
| ■ Connecting to the PC Input..... | 81 |
| ■ Connecting to the HDMI Input..... | 82 |
| ■ Connecting to the HDMI/DVI Compatible..... | 82 |
| ■ Connecting to the Common Interface..... | 83 |
| ■ Connecting Home Theater System..... | 84 |
| ■ Setting up Your PC Software (Windows only)..... | 85 |
| ■ Input Mode (PC)..... | 86 |
| ◆ RECOMMENDATIONS FOR USE | |
| ■ Troubleshooting: Before Contacting Service Personnel..... | 87 |

Symbols



Press



Important




Note

Control Panel

- The actual configuration of your TV may be different, depending on your model.

Front of the TV

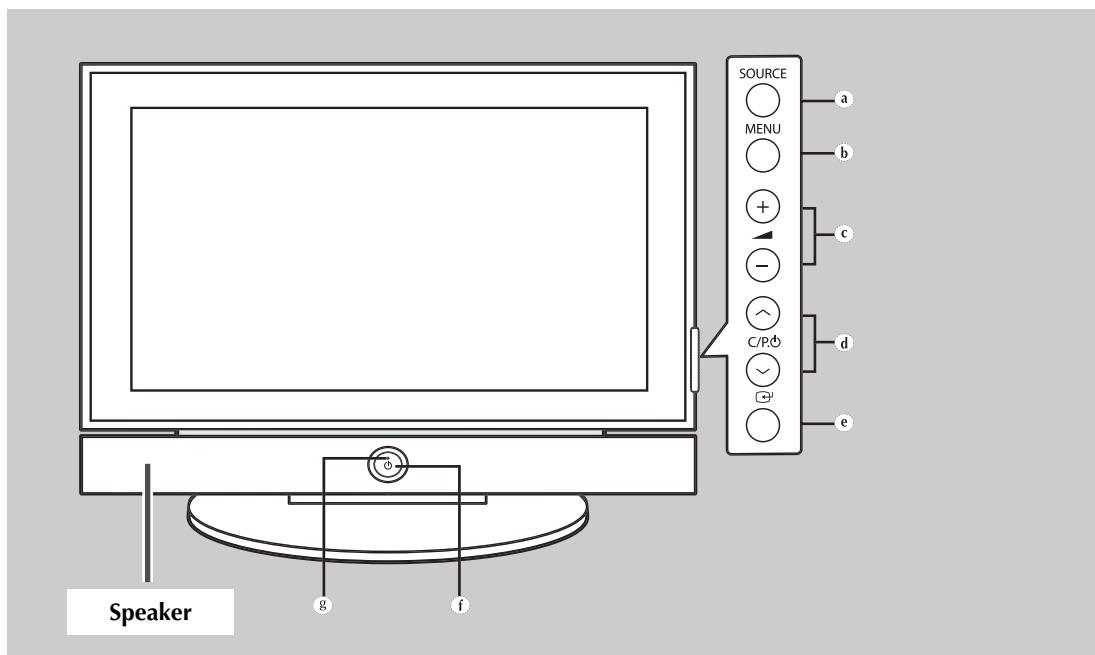

a) SOURCE button

Select the external input source.

b) MENU button

Display the on-screen menu.

c) ▲ (+, -) buttons

Adjust the volume.

d) C/P.⏻ (↗, ↘) buttons

Select channels.

e) ⏻ (ENTER) button

Confirm your choice (Store or Enter).

f) ⏻ (POWER) button

Press to turn the TV on and off.

Power Indicator

- Power Off: Blue
- Power On: Off

g) Remote Control Sensor


Aim the remote control towards this spot on the TV.

-
- ◆ You can use the **C/P.⏻ (↗, ↘)** buttons to switch on the TV when it is in standby mode depending on the model.
 - ◆ The **▲ (+, -)** and **C/P.⏻ (↗, ↘)** buttons have the same function as the **▲/▼/◀/▶** buttons on the remote control.
 - ◆ If the remote control no longer works or you have misplaced it, you can use the controls on the panel of the TV.
- If the remote control no longer works or you have misplaced it, you can use the controls on the panel of the TV.
- ◆ Press the **MENU** button once in DTV mode, then the DTV menu is displayed.

Control Panel (continued)


- The actual configuration of your TV may be different, depending on your model.

Rear Panel

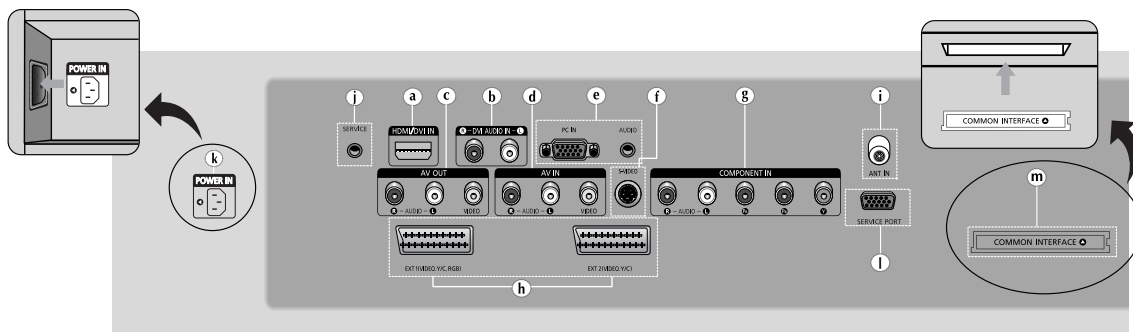

- a) HDMI/DVI IN**
Connect to the HDMI jack of a device with HDMI output. These inputs can also be used as a DVI connection with separate analog audio inputs. An optional HDMI/DVI cable will be necessary to make this connection. When using the optional HDMI/DVI adapter, the DVI analog audio inputs on your TV allow you to receive left and right audio from your DVI device. (Not compatible with PC)
 - b) DVI AUDIO IN L/R**
DVI audio outputs for external devices.
 - c) AV OUT (VIDEO / AUDIO L/R)**
Outputs for external devices.
 - d) AV IN (VIDEO / AUDIO L/R)**
Video and audio inputs for external devices, such as a camcorder or VCR.
 - e) PC IN / AUDIO**
Connect to the video and audio output jack on your PC.
 - f) S-VIDEO**
Video input for external devices with an S-Video output, such as a camcorder or VCR.
 - g) COMPONENT IN**
Video (Y/Pb/Pr) and audio (AUDIO L/R) inputs for Component.
 - h) EXT 1, EXT 2**
Inputs or outputs for external devices, such as VCR, DVD, video game device or video disc players.
 - i) ANT IN (75Ω)**
75Ω Coaxial connector for Aerial/Cable Network.
 - j) SERVICE**
Connector for service only.
 - k) POWER IN**
Connect the supplied power cord.
 - l) SERVICE PORT**
Connector for service only.
 - m) COMMON INTERFACE Slot**
Insert CI (Common Interface) card into the slot. (refer to page 83)
- For further details about connection, refer to pages 78–84.
 - Whenever you connect an audio or video system to your television, ensure that all elements are switched off. Refer to the documentation supplied with your equipment for detailed connection instructions and associated safety precautions.

Infrared Remote Control

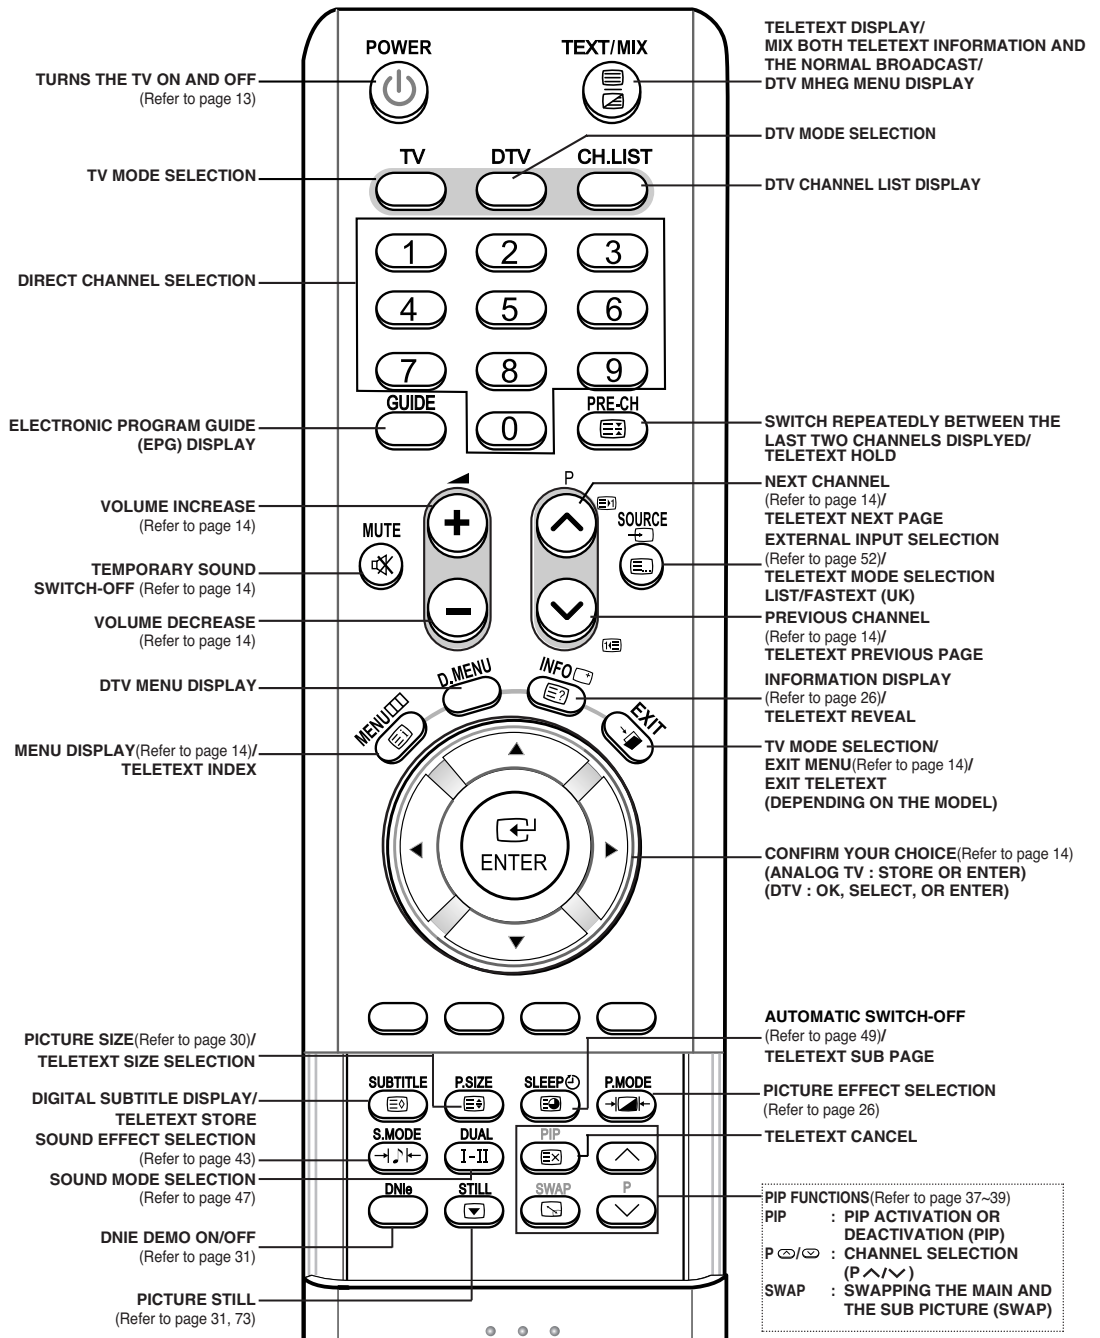

- The performance of the remote control may be affected by bright light.
- Teletext Function : Refer to pages 74-77 for details




Inserting the Batteries in the Remote Control

You must insert or replace the batteries in the remote control when you:

- ◆ *Purchase the television*
- ◆ *Find that the remote control is no longer operating correctly*

- 1 Remove the cover on the rear of the remote control by pressing the symbol (▼) downwards and then pulling firmly to remove it.
- 2 Insert two R03, UM4, "AAA" 1.5V or equivalent batteries taking care to respect the polarities:
 - ◆ - on the battery against - on the remote control
 - ◆ + on the battery against + on the remote control
- 3 Replace the cover by aligning it with the base of the remote control and pressing it back into place.


➤ Do not mix battery types, i.e. alkaline and manganese.

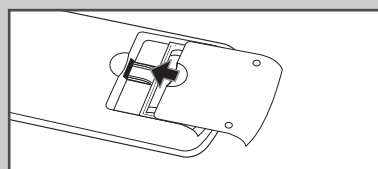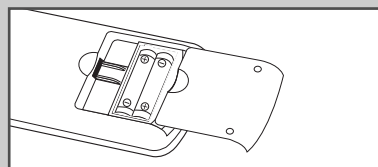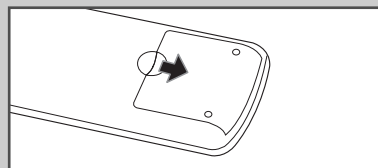

Assembling the Stand-Base

- 1 Assemble the PDP with the stand and firmly secure the PDP using 4 screws provided.

- ◆ Two or more people should carry the PDP. Never lay the PDP on the floor because of possible damage to the screen. Always store the PDP upright.

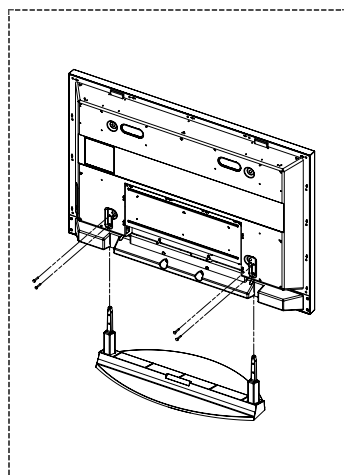

Installing the Display on the Wall Attachment Panel


➤ Refer to the correct installation guide according to your wall bracket.

Installation Notes

- ◆ Contact a technician for installing the wall bracket.
- ◆ Samsung Electronics is not responsible for any damages to the product or harm to customers when the installation is done by the customer.
- ◆ This product is for installing on cement walls. The product may not stay in place when installed on plaster or wood.


Components

- ◆ Only use the components and accessories shipped with the product.

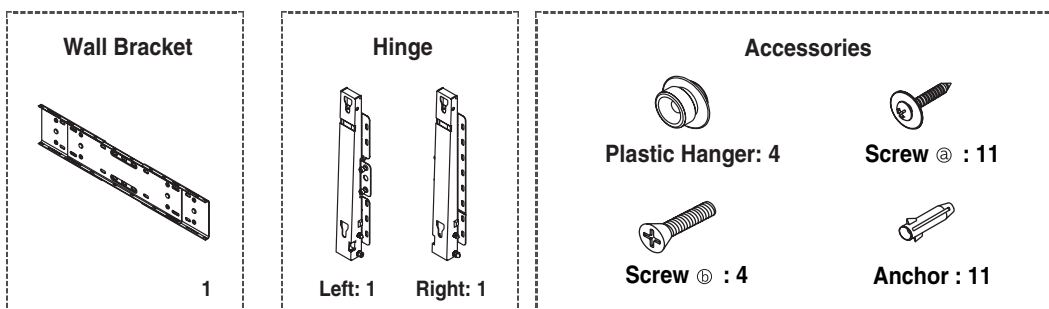


Wall Bracket Assembly


- 1 Insert and tighten the Captive Screw in the direction of the arrow.
When done, mount the wall bracket on the wall.

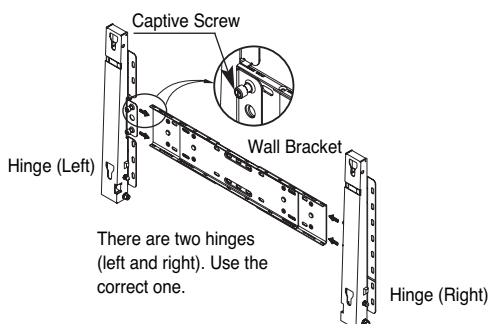

- 2 Before drilling into the wall, check if the length between the two locking holes at the back of the product is correct.
If the length is too short or long, loosen all or some of the 4 screws on the wall bracket to adjust the length.

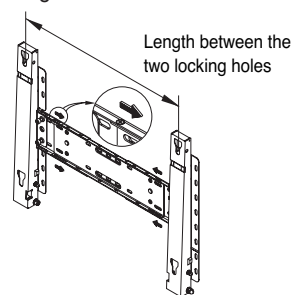

- 3 Check the installation diagram and mark the drill points on the wall. Use the 5.0 mm bit to drill holes deeper than 35 mm.
Fix each anchor in the corresponding hole. Match each of the brackets and hinge holes to the corresponding anchor holes and insert and tighten the 11 screws ③.

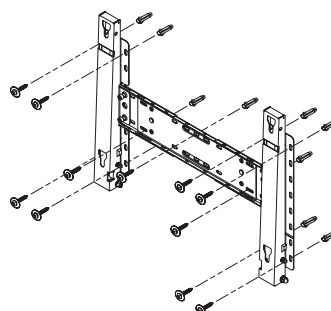


Installing the Display on the Wall Attachment Panel (continued)


To mount the product on the wall bracket

- ◆ The shape of the product may vary depending on the model.
(The assemblies of the plastic hanger and the screw are the same)

1 Remove the 4 screws on the back of the product.

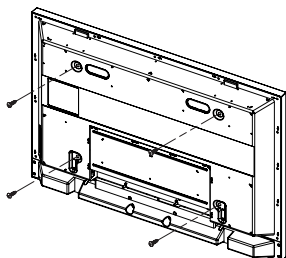


 2 Insert the screw ⑤ into the plastic hanger.
(See the figure below)




- ◆ Mount the product on the wall bracket and make sure it is properly fixed to the left and right plastic hangers.
- ◆ Be careful when installing the product on the bracket as fingers can be caught in the holes.
- ◆ Make sure the wall bracket is securely fixed to the wall, or the product may not stay in place after installation.

3 Tighten the 4 screws in step 2 (plastic hanger + screw ⑤) to the rear holes of the product.

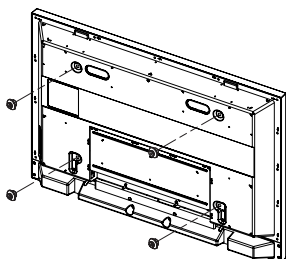


4 Remove safety pin ③ and insert the 4 product holders into the corresponding bracket holes ①. Then place the product ② so that it is firmly fixed to the bracket. Make sure to reinsert and tighten the safety pin ③ to securely hold the product to the bracket.

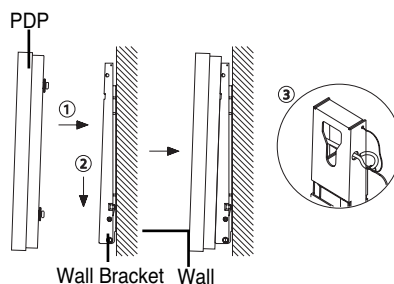

Wall Bracket Angle Adjustment


- Adjust the bracket angle to -2° before installing it on the wall.

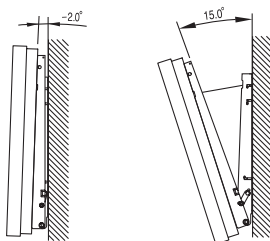

1 Fix the product to the wall bracket.


2 Hold the product at the top in the center and pull it forward (direction of the arrow) to adjust the angle.
(See the figure to the right)

3 You can adjust the bracket angle between -2° and 15° .

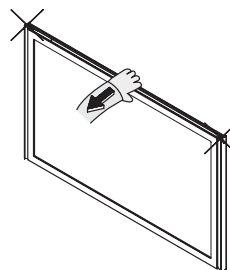

Make sure to use the top center, and not the left or the right side of the product to adjust the angle.

Connecting to an Aerial or Cable Television Network

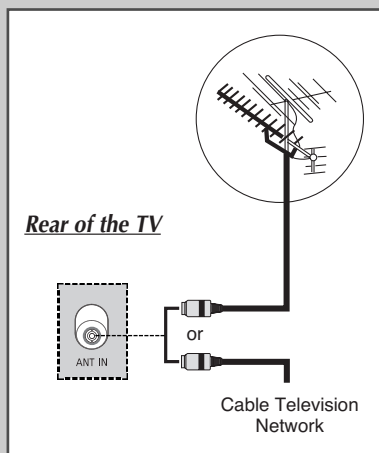


To view television channels correctly, a signal must be received by the set from one of the following sources:

- ◆ An outdoor aerial
- ◆ A cable television network
- ◆ A satellite network

- 1 In these cases, connect the aerial or network input cable to the ANT IN jack on the rear of the television.
- 2 If you are using an indoor aerial, you may need to turn it when tuning your television until you obtain a picture that is both sharp and clear.
For further details, refer to:
 - ◆ "Storing Channels Automatically" on page 17
 - ◆ "Storing Channels Manually" on page 18

- When installing or re-installing your TV, be sure to use the supplied coaxial antenna cable. If you connect using a different coaxial cable, there is risk of noise or interference to the screen image. (You must not use another general purpose cable. Use the 3M/5M/7M cable supplied by Samsung.)

Connecting a Satellite Receiver or Decoder

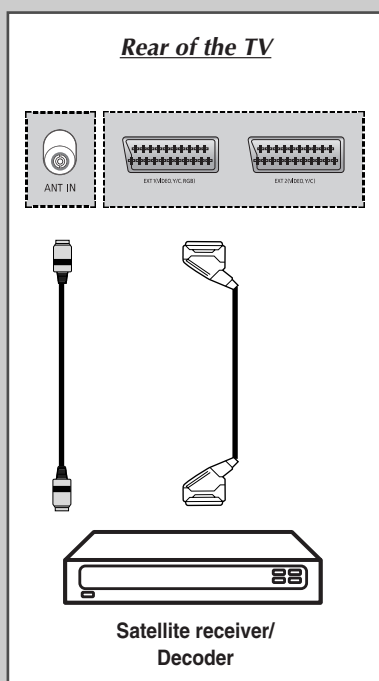

In order to watch television programmes broadcast via a satellite network, you must connect a satellite receiver to the rear of TV. Also, in order to descramble a coded transmission signal, you must connect a decoder to the rear of TV.

Using a SCART cable

Connect the receiver (or decoder) SCART cable to one of the SCART connectors on the rear of the television.

Using a coaxial cable

Connect a coaxial cable to the:

- ◆ Receiver (or Decoder) output socket.
- ◆ Television aerial input socket.

- If you wish to connect both a satellite receiver (or decoder) and a VCR, you should connect the:

- ◆ Receiver (or Decoder) to the VCR
- ◆ VCR to the television


Otherwise, connect the receiver (or decoder) directly to the television.

Switching Your Television On and Off



The mains lead is attached to the rear of your television.

- 1 Plug the mains lead into an appropriate socket.
Result: The Standby indicator on the front of the television lights up.
➤ The main voltage is indicated on the rear of the television and the frequency is 50 or 60Hz.
- 2 Press the power button on the front of the television (or **POWER** (⏻) button on the remote control) to switch the television on.
Result: The programme that you were watching last is re-selected automatically.
- 3 Press the numeric button (0-9) or **P** (↶) or (↷) button on the remote control or **C/P** (⏻) button on the right side of the panel.
➤ If you have not yet stored any channels, no clear picture appears. Refer to “Storing Channels Automatically” on page 17 or “Storing Channels Manually” on page 18.
- 3 To switch your television off, press the power button again.


Front of the TV

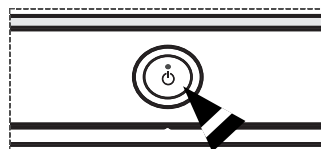

Side of the TV

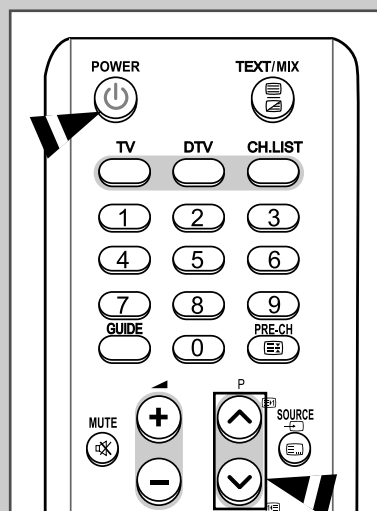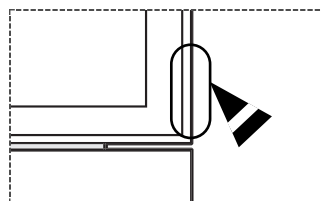

Familiarizing Yourself with the Remote Control

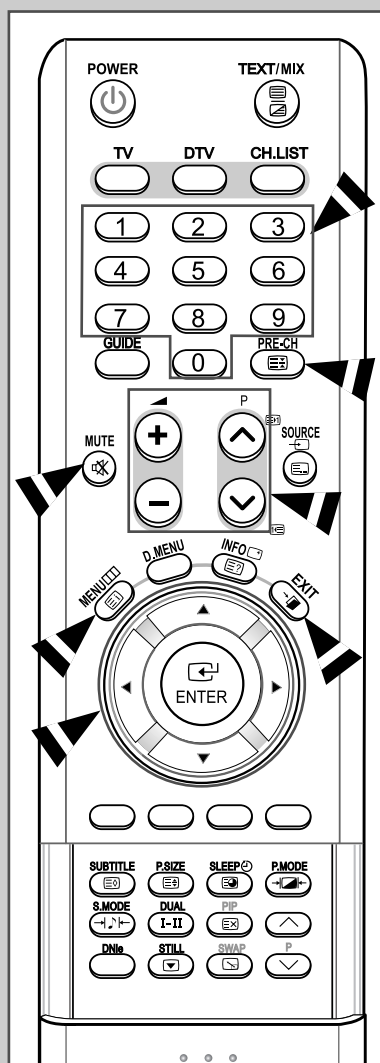

The remote control is used mainly to:

- ◆ Change channels and adjust the volume.
- ◆ Set up the television using the on-screen menu system.

The following table presents the most frequently used buttons and their functions.

| Button | Viewing Function | Menu Function |
|-----------------|--|--|
| | Used to display the next stored channel. | — |
| | Used to display the previous stored channel. | — |
| | Used to display the corresponding channels. | |
| | ➤ For double digit channels, the second digit must be pushed immediately after the first. Failure to do this will result in a single digit channel being displayed. | |
| | Used to increase the volume. | |
| | Used to decrease the volume. | |
| MUTE | Used to switch the sound off temporarily. | |
| | ➤ To turn the sound back on, press this button again, or press the or button. | |
| MENU | Used to display the on-screen menu system. | Used to return to the previous menu or normal viewing. |
| | — | Used to: <ul style="list-style-type: none"> ◆ Display a sub-menu containing selections for the current menu option. ◆ Increase/decrease a menu option value. |
| | — | Used to confirm your choice. |
| EXIT | | Used to exit from the menu system and return to normal viewing directly. |
| PRE-CH | Press the PRE-CH button. The TV will switch to the last channel viewed. To quickly switch between two channels that are far apart, select the first channel, then use the numeric buttons to select the second channel. Then, use the PRE-CH button to quickly alternate between them. | |

Plug & Play Feature

When the television is initially powered on, several basic customer settings proceed automatically and subsequently. The following settings are available.

- 1 If the television is in standby mode, press the **POWER** (⏻) button on the remote control.

Result: The message to start Plug & Play is displayed.

- 2 To start Plug & Play, press the **ENTER** (↵) button.

Result: The **Language** menu is displayed.

- The **Language** menu will automatically appear after several seconds, even if the **ENTER** (↵) button is not pressed.

- 3 Select the appropriate language by pressing the ▲ or ▼ button. Press the **ENTER** (↵) button.

Result: The message to check the connected status of the antenna is displayed.

- 4 Make sure that the antenna is connected to the TV. Press the **ENTER** (↵) button.

Result: The **Country** menu is displayed.

- 5 Select your country or area by pressing the ▲ or ▼ button. Press the **ENTER** (↵) button.

Result: The menu to select channels is displayed.

- 6 To start channel store, press the **ENTER** (↵) button.





Result: The search will end automatically. Channels are sorted and stored in the order which reflects their position in the frequency range (with lowest first and highest last). When this has finished, the menu to set the time will be displayed.

- To stop the search before it has finished or return to normal viewing, press the **MENU** (≡) or the **ENTER** (↵) button.
- Press the **ENTER** (↵) button to set the clock.

- 7 Press the ◀ or ▶ button to select the hour or minute. Set these by pressing the ▲ or ▼ button.

- You can enter the hours or minutes by using the numeric buttons on the remote control.

- 8 The settings are complete, and the stored channel will be activated.

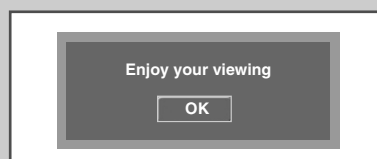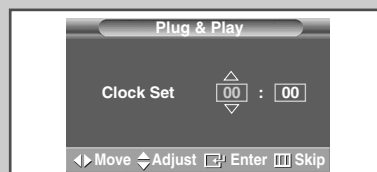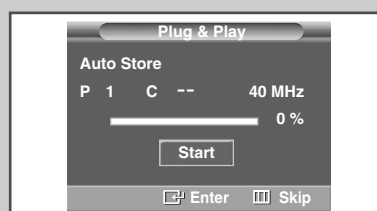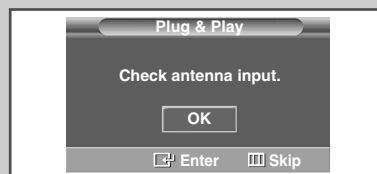

Plug & Play Feature (continued)



To activate Plug & Play on the menu, follow the instructions below.

- 1 Press the **MENU** (□□□) button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Setup**.
Result: The **Setup** menu is displayed.
- 3 Press the **ENTER** (↵) button.
- 4 Press the **ENTER** (↵) button again to select **Plug & Play**.
Result: The message to start Plug & Play is displayed.
- 5 For further details on settings, refer to the previous page.

Choosing Your Language



When you start using your television for the first time, you must select the language which will be used for displaying menus and indications.

- 1 Press the **MENU** (□□□) button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Setup**.
Result: The **Setup** menu is displayed.
- 3 Press the **ENTER** (↵) button.
- 4 Press the **▲** or **▼** button to select **Language**.
Press the **ENTER** (↵) button.
Result: The available languages are listed.
- 5 Select the appropriate language by pressing the **▲** or **▼** button.
Press the **ENTER** (↵) button.

Storing Channels Automatically

➤ Not available in DTV or external input mode.

You can scan for the frequency ranges available to you (availability depends on your country). Automatically allocated programme numbers may not correspond to actual or desired programme numbers. However you can sort numbers manually and clear any channels you do not wish to watch.

- 1 Press the **MENU** (□□□) button.

Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button to select **Channel1**.

Result: The **Channel1** menu is displayed.

- 3 Press the **ENTER** (↵) button.

Result: The **Country** is selected.

- 4 Press the **ENTER** (↵) button again.

Result: The available countries are listed.

- 5 Select your **Country** by pressing the **▲** or **▼** button.

➤ If you have selected the **Others** option but do not wish to scan the PAL frequency range, store the channels manually ("Storing Channels Manually" on page 18).

- 6 Press the **ENTER** (↵) button.

- 7 Press the **▲** or **▼** button to select **Auto Store**.
Press the **ENTER** (↵) button.

Result: The **Auto Store** menu is displayed.

- 8 Press the **ENTER** (↵) button again to start the search.

Result: The search will end automatically. Channels are sorted and stored in an order which reflects their position in the frequency range (with lowest first and highest last). The programme originally selected is then displayed.

➤ To stop the search before it has finished, press the **MENU** (□□□) or the **ENTER** (↵) button.

- 9 When the channels have been stored, you can:

- ◆ Sort them in the order required ("Sorting the Stored Channels" on page 21).
- ◆ Clear a channel ("Skipping Unwanted Channels" on page 20).
- ◆ Fine-tune channel reception if necessary ("Fine Tuning Channel Reception" on page 25).
- ◆ Assign a name to the stored channels ("Assigning Names to Channels" on page 22).
- ◆ Activate/deactivate the **Digital NR** (Noise Reduction) feature ("Using the Digital NR (Noise Reduction) Feature" on page 40).
- ◆ Activate/deactivate the **LNA** (Low Noise Amplifier) feature ("Using the LNA (Low Noise Amplifier) Feature" on page 24).




Storing Channels Manually

➤ Not available in DTV or external input mode.

You can store television channels, including those received via cable networks.

When storing channels manually, you can choose:

- ◆ *Whether or not to store each of the channels found.*
- ◆ *The programme number of each stored channel which you wish to identify.*

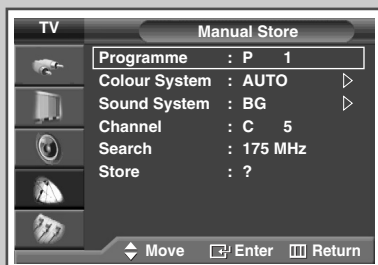

1 Press the **MENU** () button.

Result: The main menu is displayed.

2 Press the **▲** or **▼** button to select **Channel**.

Result: The **Channel** menu is displayed.

3 Press the **ENTER** () button.

4 Press the **▲** or **▼** button to select **Manual Store**.
Press the **ENTER** () button.

5 If necessary, select the broadcasting standard required.
Press the **▲** or **▼** button to select **Colour System**.
Press the **ENTER** () button.

6 Select the required colour standard by pressing the **▲** or **▼** button. Press the **ENTER** () button.

Result: The following options are available.
(depending on the model)

AUTO - PAL - SECAM - NTSC 4.43

7 Press the **▲** or **▼** button to select **Sound System**.
Press the **ENTER** () button.

8 Select the required sound standard by pressing the **▲** or **▼** button. Press the **ENTER** () button.

Result: The following options are available.

BG - DK - I - L

Storing Channels Manually (continued)



- 9 If you know the number of the channel to be stored, see the following steps.
 - ◆ Press the ▲ or ▼ button to select **Channel1**. Press the **ENTER** (↵) button.
 - ◆ Press the ▲ or ▼ button to select **C** (Air channel) or **S** (Cable channel).
 - ◆ Press the ► button.
 - ◆ Press the ▲ or ▼ button to select the required number. Press the **ENTER** (↵) button.
 - If there is abnormal sound or no sound, re-select the sound standard required.
- 10 If you do not know the channel numbers, select **Search** by pressing the ▲ or ▼ button. Press the **ENTER** (↵) button. Press the ▲ or ▼ button to start the search. Press the **ENTER** (↵) button.

Result: The tuner scans the frequency range until the first channel or the channel that you selected is received on your screen.
- 11 To assign a programme number to a channel, select **Programme** by pressing the ▲ or ▼ button. Press the **ENTER** (↵) button.
- 12 Press the ▲ or ▼ button until you find the correct number. Press the **ENTER** (↵) button.
- 13 To store the channel and associated programme number, select **Store** by pressing the ▲ or ▼ button. Set to **OK** by pressing the **ENTER** (↵) button.
- 14 Repeat steps 9 to 13 for each channel to be stored.



Channel mode

- ◆ **P** (Programme mode): When completing tuning, the broadcasting stations in your area have been assigned to position numbers from P00 to P99. You can select a channel by entering the position number in this mode.
- ◆ **C** (Air channel mode): You can select a channel by entering the assigned number to each air broadcasting station in this mode.
- ◆ **S** (Cable channel mode): You can select a channel by entering the assigned number for each cable channel in this mode.

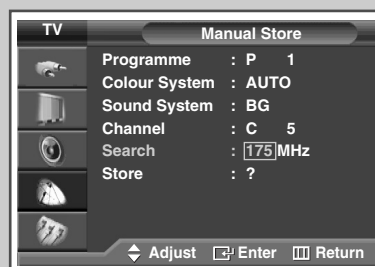
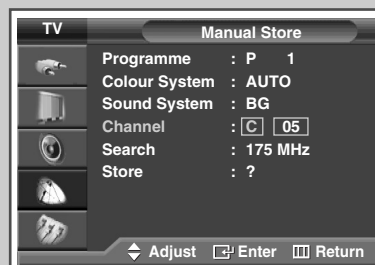


Skiping Unwanted Channels

➤ Not available in DTV or external input mode.

You can exclude the channels of your choice from the channel scan operation. When you scan through the stored channels, those that you have chosen to skip are not displayed.

All channels that you do not specifically choose to skip are displayed during scanning.

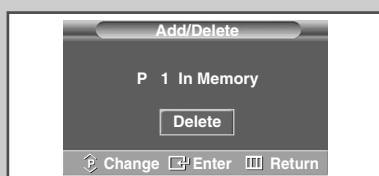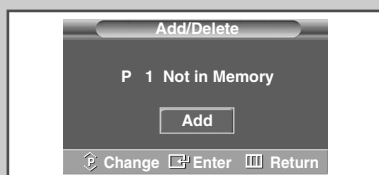

- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Channel1**.
Result: The **Channel1** menu is displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▲** or **▼** button to select **Add/Delete**.
Press the **ENTER** () button.
Result: The **Add/Delete** menu is displayed with the current channel selected.
- 5 Press the **P** () or () button to delete or add the required channel.
Press the **ENTER** () button.
- 6 Repeat step 5 for each channel to be deleted or added.

Sorting the Stored Channels

➤ Not available in DTV or external input mode.

This operation allows you to change the programme numbers of stored channels. This operation may be necessary after using auto store.

- 1 Press the **MENU** () button.

Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button to select **Channel1**.

Result: The **Channel1** menu is displayed.

- 3 Press the **ENTER** () button.

- 4 Press the **▲** or **▼** button to select **Sort**.



Press the **ENTER** () button.

- 5 Select the channel that you wish to move by pressing the **▲** or **▼** button. Press the **ENTER** () button.

- 6 Select the number of the programme to which the channel is to be moved by pressing the **▲** or **▼** button. Press the **ENTER** () button.

Result: The channel is moved to its new position and all other channels are shifted accordingly.



- 7 Repeat steps 5 to 6 until you have moved all the channels to the required programme numbers.

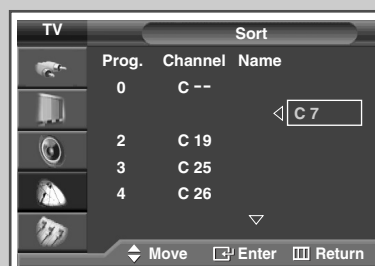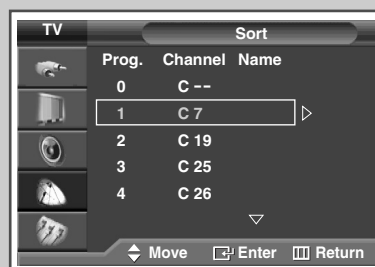

Assigning Names to Channels

➤ Not available in DTV or external input mode.

Channel names will be assigned automatically when channel information is broadcast. These names can be changed, allowing you to assign new names.

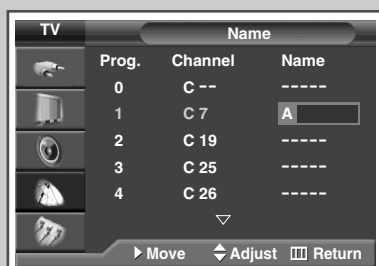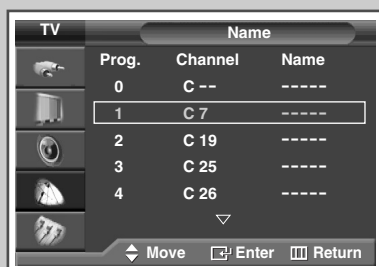

1 Press the **MENU** () button.

Result: The main menu is displayed.

2 Press the **▲** or **▼** button to select **Channel1**.

Result: The **Channel1** menu is displayed.

3 Press the **ENTER** () button.

4 Press the **▲** or **▼** button to select **Name**.

Press the **ENTER** () button.

Result: The **Name** menu is displayed with the current channel selected.

5 Press the **▲** or **▼** button to select the channel to be assigned to a new name. Press the **ENTER** () button.

Result: Arrow indications are displayed around the name box.

6 Press the **▲** or **▼** button to select a letter (A~Z), a number (0~9), or a symbol. Move on to the previous or next letter by pressing the **◀** or **▶** button.


7 Press the **ENTER** () button.


8 Repeat steps 5 to 7 for each channel to be assigned to a new name.

Locking the Channel

➤ Not available in DTV or external input mode.

This feature allows you to prevent unauthorized users, such as children, from watching unsuitable programmes by muting out video and audio. Child Lock cannot be released using front panel buttons. Only remote control can release the Child Lock setting, so keep the remote control away from children.

- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Setup**.
Result: The **Setup** menu is displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▲** or **▼** button to select **Child Lock**.
Press the **ENTER** () button.
- 5 Press the **ENTER** () button again.
Select **On** by pressing the **▲** or **▼** button.
Press the **ENTER** () button.
- 6 Press the **▲** or **▼** button to select **Programme**.
Press the **ENTER** () button.
- 7 Select the number of programme to which the channel is to be locked by pressing the **▲** or **▼** button.
Press the **ENTER** () button.
- 8 Press the **▲** or **▼** button to select **Lock**.
Select **Locked** by pressing the **ENTER** () button.
Result: The selected channel is locked and marked with the  symbol.

-
- ◆ A Blue screen is displayed when the **Child Lock** is activated.
 - ◆ To unlock the Channel lock, press the **ENTER** () button again. The locked channel is unlocked.
 - ◆ When a channel is locked, the channel is marked with the  symbol on the left side in the Channel OSD (On Screen Display).



Using the LNA (Low Noise Amplifier) Feature



This function is very useful in the situation that the TV is used in weak signal. LNA amplifies the TV signal in the weak signal area, a low-noise preamplifier boosts the incoming signal.

- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Channel**.
Result: The **Channel** menu is displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▲** or **▼** button to select **LNA**.
Press the **ENTER** () button.
- 5 Select **Off** or **On** by pressing the **▲** or **▼** button.
Press the **ENTER** () button.

- ♦ If the picture is noisy with the **LNA** set to **On**, select **Off**.
- ♦ **LNA** setting is to be made for each channel.
- ♦ Depending on areas, factory mode of **LNA** will be set up as **On** or **Off**.

Fine Tuning Channel Reception

➤ Not available in DTV or external input mode.

If the reception is clear, you do not have to fine tune the channel, as this is done automatically during the search and store operation. If the signal is weak or distorted, you may have to fine tune the channel manually.

- 1 Press the **MENU** () button.

Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button to select **Channel1**.

Result: The **Channel1** menu is displayed.

- 3 Press the **ENTER** () button.

- 4 Press the **▲** or **▼** button to select **Fine Tune**.

Press the **ENTER** () button.

Result: The horizontal bar is displayed.



- 5 To obtain a sharp and clear picture and good sound quality, press the **◀** or **▶** button until you reach the optimal setting.

- 6 To store the fine tuning setting in the TV's memory, press the **ENTER** () button.



Result: The programme number changes to Red and is marked with a "★".

- 7 To reset the fine tuning to 0, select **Reset** by pressing the **▲** or **▼** button then press the **ENTER** () button.

- If you are unable to fine tune a channel, check that the Colour System and Sound System settings are correct.
- Fine Tune Store will change the colour of the Channel OSD (On Screen Display) from White to Red and add the "★" mark.

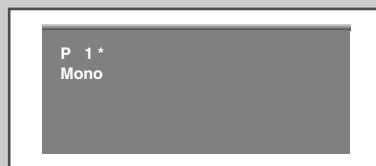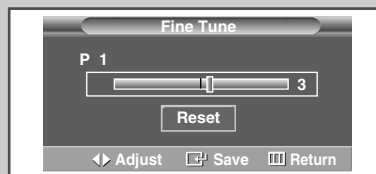




Displaying Information

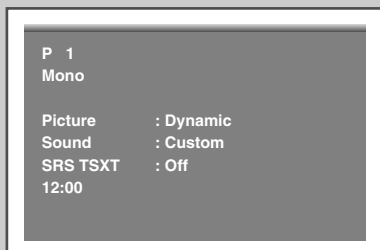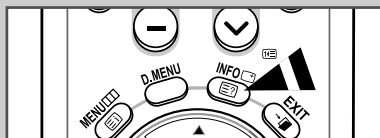

You can view the channel information and setting status you have selected by pressing the "INFO (□+)" button on the remote control.

The information displayed varies according to the selected source.

Changing the Picture Standard

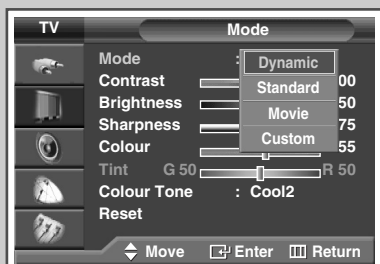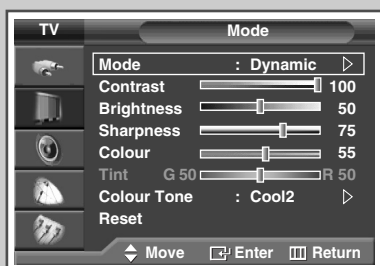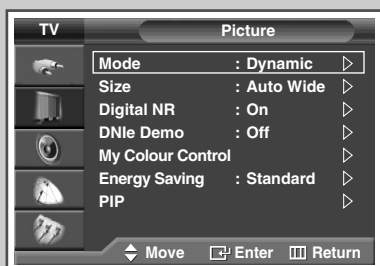

You can select the type of picture which best corresponds to your viewing requirements.





- 1 Press the **MENU** (□□□) button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Picture**.
Result: The **Picture** menu is displayed.
- 3 Press the **ENTER** (□+) button.
Result: The **Mode** is selected.
- 4 Press the **ENTER** (□+) button again.
Result: The **Mode** menu is displayed.
- 5 Press the **ENTER** (□+) button.
Result: The following options are available.
Dynamic - Standard - Movie - Custom
- 6 Select the required option by pressing the **▲** or **▼** button.
- 7 Press the **ENTER** (□+) button.

➤ You can also set these options simply by pressing the **P.MODE** (□+): Picture Mode) button on the remote control.

Customizing the Picture Settings





Your television has several setting options that allow you to control the picture quality.



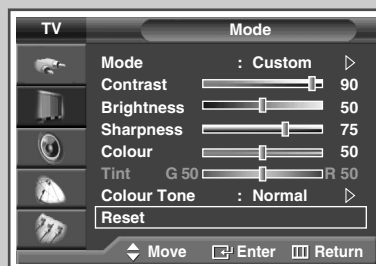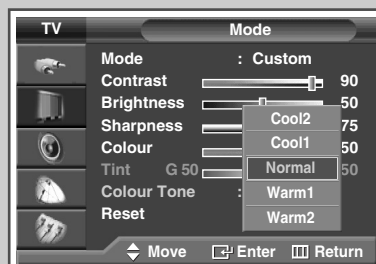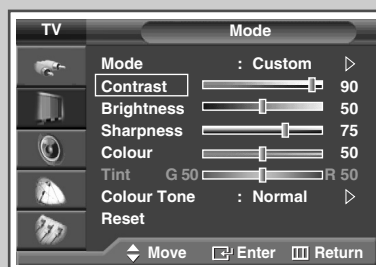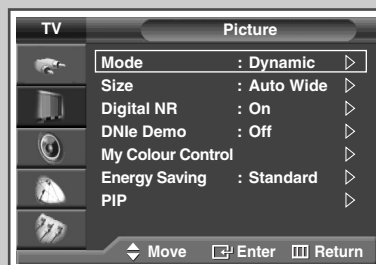


- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Picture**.
Result: The **Picture** menu is displayed.
- 3 Press the **ENTER** () button.
Result: The **Mode** is selected.
- 4 Press the **ENTER** () button again.
Result: The **Mode** menu is displayed.
- 5 Press the **ENTER** () button.
Result: The following options are available.
Dynamic - Standard - Movie - Custom
- 6 Select the required option by pressing the **▲** or **▼** button.
- 7 Press the **ENTER** () button.
- 8 Select the required option by pressing the **▲** or **▼** button.
Result: The following options are available.
 - ◆ **Contrast - Brightness - Sharpness - Colour - Tint** (NTSC only)
 - ◆ **Contrast - Brightness** : PC or HDMI Mode.
- 9 Press the **ENTER** () button.
Result: The horizontal bar is displayed.
Press the **◀** or **▶** button until you reach the optimal setting.
 - ◆ Press the **▲** or **▼** button to select other option(s).
 - ◆ The settings values may vary depending on the input source. (ex. RF, Video, Component, PC, or HDMI.)
- 10 Press the **MENU** () button to return to **Mode** menu.
Press the **▲** or **▼** button to select **Colour Tone**.
Press the **ENTER** () button.
- 11 Select the required option by pressing the **▲** or **▼** button.
Result: The following options are available.
Cool2 - Cool1 - Normal - Warm1 - Warm2
- 12 Press the **ENTER** () button.
- 13 To return the factory defaults, select **Reset** by pressing the **▲** or **▼** button. Press the **ENTER** () button.
Result: The previously adjusted settings will be reset to the factory defaults.
 - The reset function is set for each mode (**Dynamic**, **Standard**, **Movie**, or **Custom**).
 - The reset function is also set for each **Colour Tone** (**Cool2**, **Cool1**, **Normal**, **Warm1**, or **Warm2**).



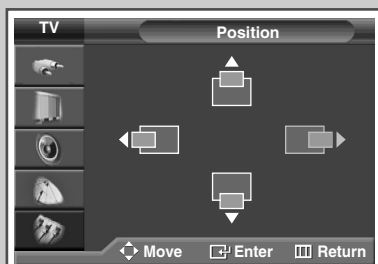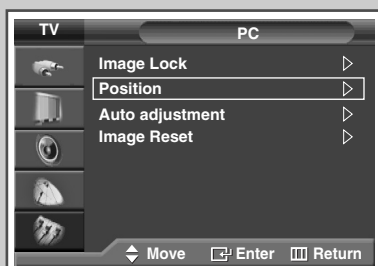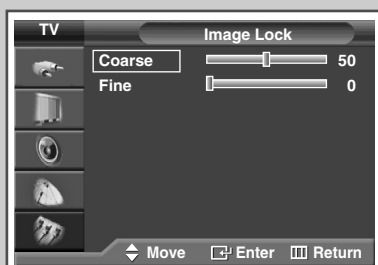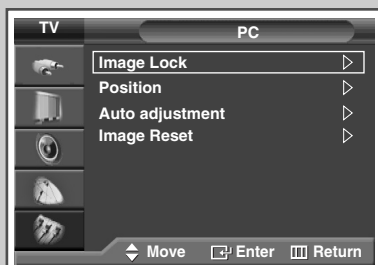



Setting the Picture (PC Mode)

- Preset to the **PC** mode by pressing the **SOURCE** () button.


 



- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Setup**.
Result: The **Setup** menu is displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▲** or **▼** button to select **PC**.
Press the **ENTER** () button.
Result: The **PC** menu is displayed.
- 5 Press the **▲** or **▼** button to select **Image Lock**.
Press the **ENTER** () button.
- 6 Press the **▲** or **▼** button to select the option (**Coarse** or **Fine**) to be adjusted. Press the **ENTER** () button.
Result: The horizontal bar is displayed.
Press the **◀** or **▶** button until you reach the optimal setting.

➤ Press the **▲** or **▼** button to select other option(s).
- 7 Press the **ENTER** () button.
- 8 Press the **MENU** () button.
Result: The **PC** menu is displayed again.
- 9 Press the **▲** or **▼** button to select **Position**.
Press the **ENTER** () button.
- 10 Adjust the position by pressing the **▲**, **▼**, **◀**, or **▶** button.
- 11 Press the **ENTER** () button.

Setting the Picture (PC Mode) (continued)

- Preset to the **PC** mode by pressing the **SOURCE** () button.

- 12** Press the **▲** or **▼** button to select **Auto adjustment**.
Press the **ENTER** () button.
- Result: The screen quality and position are automatically reset.
The settings are all finished, and the TV will automatically return to the previous picture.
- 13** To return the factory defaults, select **Image Reset** by pressing the **▲** or **▼** button. Press the **ENTER** () button.
- Result: The previously adjusted settings will be reset to the factory defaults.

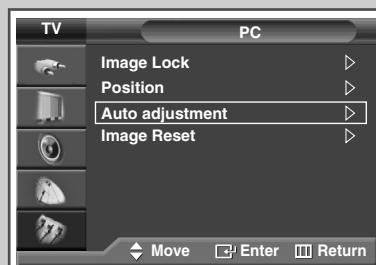

Auto Adjustment in progress
Please wait


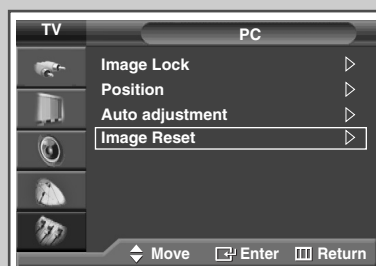



Image Reset has completed.

Return

Selecting the Picture Size

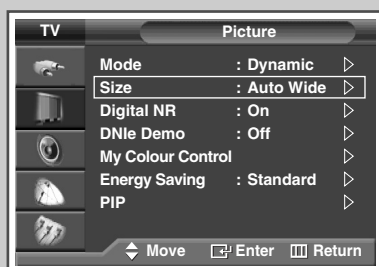

PC to HDMI Mode

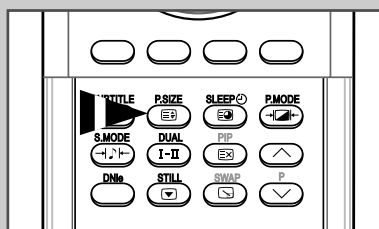

You can select the picture size which best corresponds to your viewing requirements.

- 1 Press the **MENU** () button.
Result: The main menu is displayed.
 - 2 Press the **▲** or **▼** button to select **Picture**.
Result: The **Picture** menu is displayed.
 - 3 Press the **ENTER** () button.
 - 4 Press the **▲** or **▼** button to select **Size**.
Press the **ENTER** () button.
 - 5 Select the required option by pressing the **▲** or **▼** button.
Result: The following options are available.
 - ◆ **Auto Wide** : Expanding and pulling up the picture from 4:3 to 16:9 ratio.
 - ◆ **Wide** : Sets the picture to 16:9 wide mode.
 - ◆ **Wide 4:3** : Magnify the size of the picture more than 4:3. Move the screen up/down using the **▲** or **▼** button after selecting the **Wide** by pressing the **►** or **ENTER** () button.
 - ◆ **Panorama** : Use this mode for the wide aspect ratio of a panoramic picture.
 - ◆ **Zoom** : Magnify the size of the picture vertically on screen.
 - ◆ **4:3** : Sets the picture to 4:3 normal mode.
 - 6 Press the **ENTER** () button.
- ◆ You can select these options simply by pressing the **P.SIZE** button on the remote control.
 - ◆ If you change the picture size when PIP is On, PIP will automatically be turned Off.
 - ◆ Depending on the input source, the **P.SIZE** options may vary.

Positioning and Sizing the screen using Zoom

- ◆ Resizing the screen using the **Zoom** enables the positioning and sizing of the screen to up/down direction using the **▲** or **▼** button as well as the screen size.
- ◆ Move the screen up/down using the **▲** or **▼** button after selecting the **Zoom** by pressing the **◀** or **▶** button.
- ◆ Resize the screen vertically using the **▲** or **▼** button after selecting the **Zoom** by pressing the **◀** or **▶** button.
- ◆ Screen enlargement operates only in TV/Video/S-Video/Component input modes.
- ◆ PC/HDMI modes prevent the screen enlargement function.

Viewing the DNle Demonstration

This TV includes the DNle function so as to provide a high visual quality.





If you set DNle Demo to On, you can view an applied DNle and a normal picture on the screen, for demonstration purposes. Using this function, you can view the difference in the visual quality.

- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Picture**.
Result: The **Picture** menu is displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▲** or **▼** button to select **DNle Demo**.
Press the **ENTER** () button.
- 5 Select **Off** or **On** by pressing the **▲** or **▼** button.
Result: The following options are available.
 - ◆ **On** : Switches on the **DNle Demo** mode.
 - ◆ **Off** : Switches off the **DNle Demo** mode.
- 6 Press the **ENTER** () button.

➤ **DNle™** (Digital Natural Image engine) **DNle™**

This feature brings you more detailed image with 3D noise reduction, detail enhancement, contrast enhancement and white enhancement. New image compensation Algorithm gives brighter, clearer, more detailed image to you. DNle™ technology will fit every signal into your eyes.


- ### ➤
- You can also set these options simply by pressing the **DNle** button.

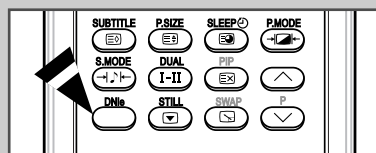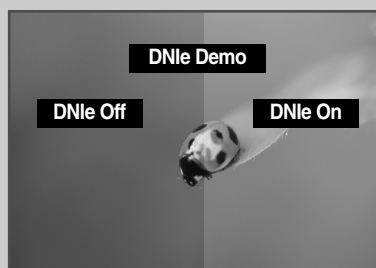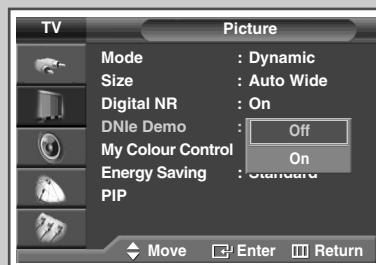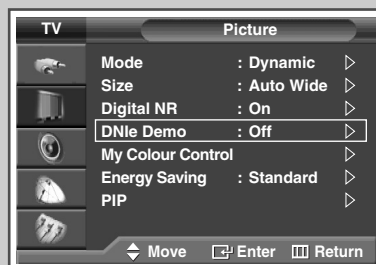



Freezing the Current Picture

You can freeze the picture when watching a television programme simply by pressing the “STILL” button. To return to normal viewing, press it again.

- ### ➤
- In the PIP mode, the main and sub pictures are stilled at the same time.
- ### ➤
- This function will automatically cancel after 5 minutes.

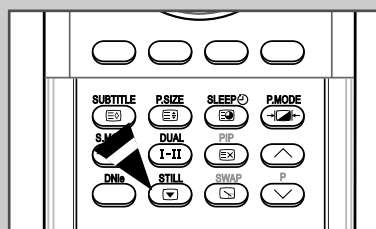

Setting the My Colour Control (Easy Control)

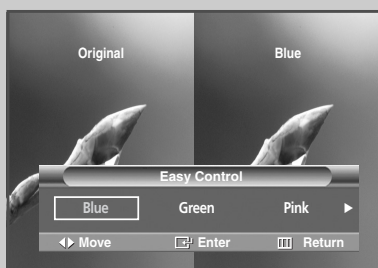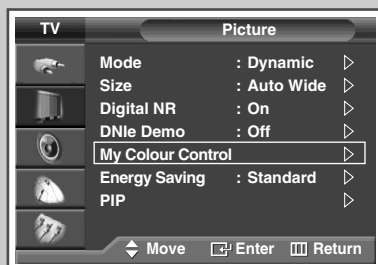






This feature allows you to adjust colours according to your preferences, by adjusting skin, sky, and grass tones using the predefined settings (Blue, Green, Pink, Standard, and Custom) without affecting other colours on the screen.

- 1 Press the **MENU** () button.
Result: The main menu is displayed.
 - 2 Press the **▲** or **▼** button to select **Picture**.
Result: The **Picture** menu is displayed.
 - 3 Press the **ENTER** () button.
 - 4 Press the **▲** or **▼** button to select **My Colour Control**.
 Press the **ENTER** () button.
Result: The **Easy Control** is selected.
 - 5 Press the **ENTER** () button again.
Result: The following options are available.
 - ◆ **Blue**
Emphasizing clear blues.
 - ◆ **Green**
Emphasizing mild greens.
 - ◆ **Pink**
Emphasizing warm skin colours.
 - ◆ **Standard**
Standard picture.
 - ◆ **Custom**
Changing the settings in the **Detail Control** menu will automatically set to **Custom** (see next page).
 - 6 Select the required option by pressing the **◀** or **▶** button.
Result: The original picture (before adjustment) is shown on the left side, while the selected mode is shown on the right side.
 - 7 Press the **ENTER** () button.
- ◆ Depending on the input source, this feature may not operate.
- ◆ When running the My Colour Control feature, the current picture is captured as a still image before being displayed on the screen.
- ◆ You cannot use this function, when PIP is On.

Setting the My Colour Control (Detail Control)

This setting can be adjusted to suit your personal preferences.

- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Picture**.
Result: The **Picture** menu is displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▲** or **▼** button to select **My Colour Control**.
Press the **ENTER** () button.
- 5 Press the **▲** or **▼** button to select **Detail Control**.
Press the **ENTER** () button.
- 6 Select the required option (**Pink**, **Green**, or **Blue**) by pressing the **▲** or **▼** button. Press the **ENTER** () button.
- 7 Press the **◀** or **▶** button until you reach the optimal setting.
Result: Changing the adjustment value will refresh the adjusted screen.
➤ Press the **▲** or **▼** button to select other option(s).
- 8 Press the **MENU** () button.
Result: The **Detail Control** menu is displayed again.
- 9 To return the factory defaults, select **Reset** by pressing the **▲** or **▼** button. Press the **ENTER** () button.
Result: The previously adjusted colours will be reset to the factory defaults.

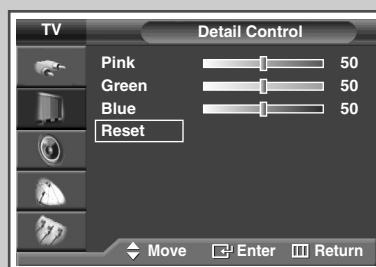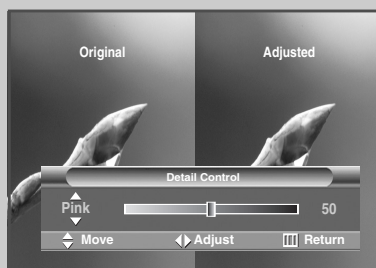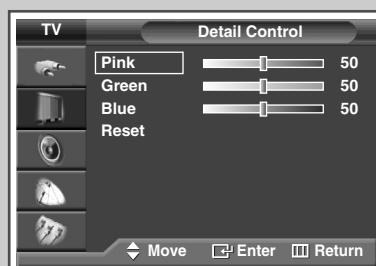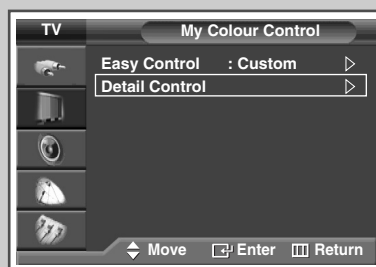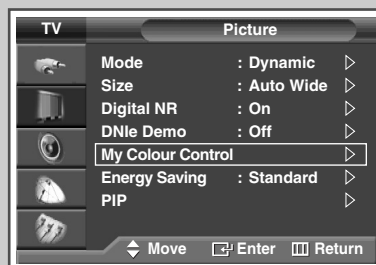

Setting the Blue Screen



➤ Not available in DTV mode.

If no signal is being received or the signal is very weak, a blue screen automatically replaces the noisy picture background. If you wish to continue viewing the poor picture, you must set the Blue Screen mode to Off.



- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Setup**.
Result: The **Setup** menu is displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▲** or **▼** button to select **Blue Screen**.
Press the **ENTER** () button.
- 5 Select **Off** or **On** by pressing the **▲** or **▼** button.
Press the **ENTER** () button.

➤ **Blue Screen** is displayed while there is no signal from the external device in the external mode, regardless of the **Blue Screen** Setting.



Using the Colour Weakness Enhancement Feature

This feature adjusts the red, green, or blue colour to enhance the picture according to the user's particular colour weakness.

- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Setup**.
Result: The **Setup** menu is displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▲** or **▼** button to select **Colour Weakness**.
Press the **ENTER** () button.
Result: The **Colour Weakness** menu is selected.
- 5 Press the **ENTER** () button again.
Press the **▲** or **▼** button to select **On**.
Press the **ENTER** () button.
- 6 Select the required option (**Red**, **Green**, or **Blue**) by pressing the **▲** or **▼** button. Press the **ENTER** () button.
Result: The horizontal bar is displayed.
Press the **◀** or **▶** button until you reach the optimal setting.
➤ Press the **▲** or **▼** button to select other option(s).
- 7 Press the **ENTER** () button.

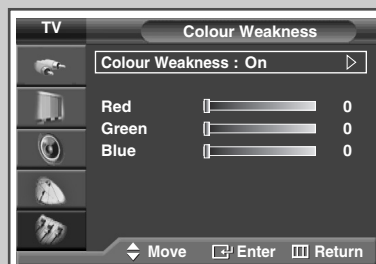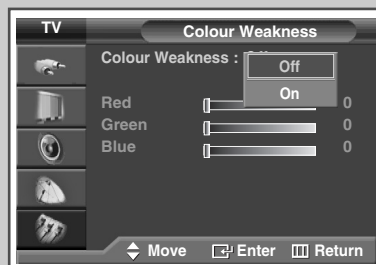

Using the Energy Saving Feature

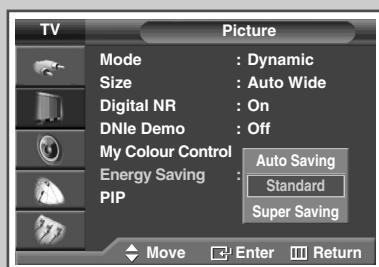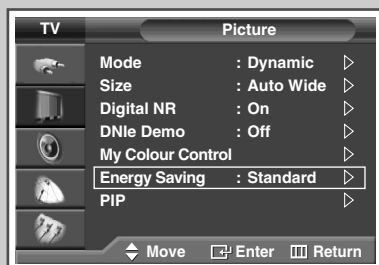

This feature adjusts the screen brightness automatically depending on the surrounding lighting conditions.

- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Picture**.
Result: The **Picture** menu is displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▲** or **▼** button to select **Energy Saving**.
 Press the **ENTER** () button.
- 5 Select the required option by pressing the **▲** or **▼** button.
Result: The following options are available.
 - ◆ **Auto Saving:** Automatically adjusts to the surrounding illumination.
 - ◆ **Standard:** Operates in standard mode regardless of the surrounding illumination.
 - ◆ **Super Saving:** Enters maximum power saving mode regardless of the surrounding illumination.
- 6 Press the **ENTER** () button.

➤ This feature is not available when the input source is in PC or HDMI mode.

Viewing the Picture in Picture (PIP)

➤ Not available in DTV mode.

You can display a sub picture within the main picture of a TV program or external A/V devices. In this way you can watch TV program or monitor the video input from any connected devices while watching TV or other video input.

- 1 Press the **MENU** () button.

Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button to select **Picture**.

Result: The **Picture** menu is displayed.

- 3 Press the **ENTER** () button.

- 4 Press the **▲** or **▼** button to select **PIP**.

Press the **ENTER** () button.

Result: The **PIP** is selected.

- 5 Press the **ENTER** () button again.
To activate, set **PIP** to **on** by pressing the **▲** or **▼** button.
Press the **ENTER** () button.

- 6 Press the **▲** or **▼** button to select **Source**.

Press the **ENTER** () button.

Result: The following options are available.

TV - Ext.1 - Ext.2 - AV - S-Video

- 7 Select a source of the sub picture by pressing the **▲** or **▼** button.
Press the **ENTER** () button.

- 8 Press the **▲** or **▼** button to select **Swap**.

Press the **ENTER** () button.

Result: The main picture and sub picture are interchanged.

➤ You cannot use the Swap function for PC, HDMI or COMP.

- 9 Press the **▲** or **▼** button to select **Size**.

Press the **ENTER** () button.






Result: The following options are available.





(Large) – (Double Window) – (Double Wide)

➤ The Double Window or Double Wide mode can not be selected in **PC** or **HDMI** mode.

- 10 Select a size of the sub picture by pressing the **▲** or **▼** button.
Press the **ENTER** () button.

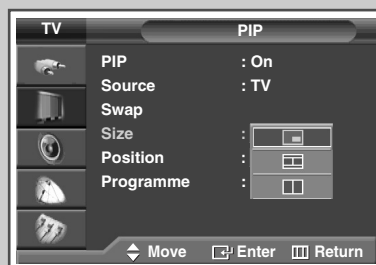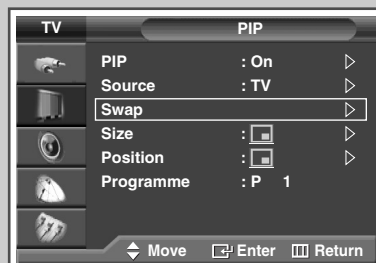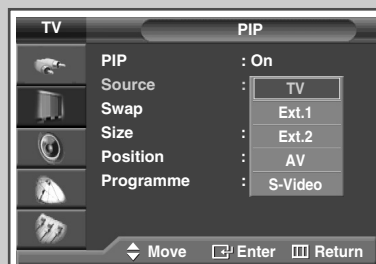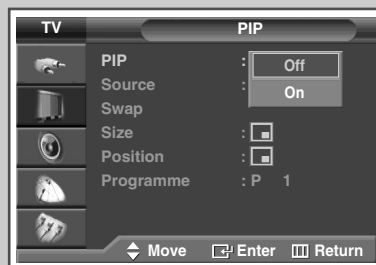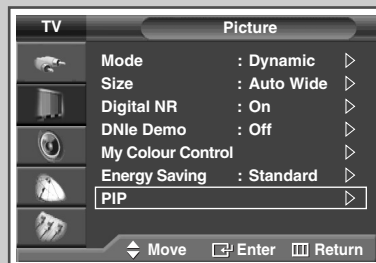

Viewing the Picture in Picture (PIP) (continued)

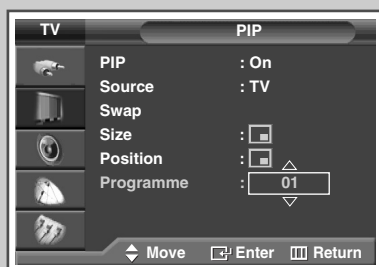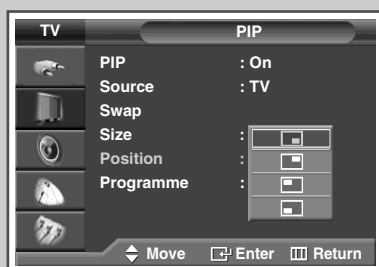

- 11 Press the ▲ or ▼ button to select **Position**. Press the **ENTER** (↵) button.

Result: The following options are available.



- The **Position** menu is available when the **Size** is large (Large) mode.

- 12 Select a position of the sub picture by pressing the ▲ or ▼ button. Press the **ENTER** (↵) button.

- 13 Press the ▲ or ▼ button to select **Programme**. Press the **ENTER** (↵) button.



 



- 14 Select the channel that you want to view through sub picture by pressing the ▲ or ▼ button.

- When the **Source** is set to **TV**, you can select the channel of the sub-picture.
- If the sub picture receives no signal and the main picture is output from a Component, PC or HDMI signal, the sub picture will be blue. If the main picture is output from a Video signal, the sub picture will be black.

- 15 Press the **ENTER** (↵) button.

Viewing the Picture in Picture (PIP) (continued)

Easy functions of the remote control.

| Buttons | Feature |
|--|---|
| PIP | Used to activate or deactivate the PIP function directly. |
| SWAP | Used to interchange the main picture and the sub picture. <ul style="list-style-type: none"> ➤ When the main picture is in the Video mode and the sub picture is in the TV mode, you might not hear the sound of main picture when pressing the SWAP () button after changing the sub picture channel. At this time, reselect the channel of main picture. |
| POSITION | Used to move the sub picture counterclockwise. |
| SOURCE | Used to assign a source of the sub picture (TV , Ext.1 , Ext.2 , AV , or S-Video). |
| SIZE | Used to select a size of the sub picture ( (Large),  (Double Window), or  (Double Wide)). |
| P  /  | Used to select a channel of the sub picture. |

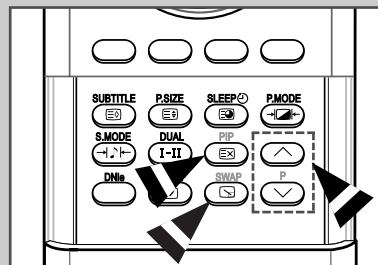




Table of PIP Settings

X - This PIP combination is not available.
O - This PIP combination is available.

| Sub \ Main | TV | DTV | Ext.1 | Ext.2 | AV | S-Video | Component | PC | HDMI |
|------------------|----|-----|-------|-------|----|---------|-----------|----|------|
| TV | X | X | O | O | O | O | O | O | O |
| DTV | X | X | X | X | X | X | X | X | X |
| Ext.1 | O | X | X | O | O | O | O | O | O |
| Ext.2 | O | X | O | X | O | O | O | O | O |
| AV | O | X | O | O | X | O | O | O | O |
| S-Video | O | X | O | O | O | X | O | O | O |
| Component | X | X | X | X | X | X | X | X | X |
| PC | X | X | X | X | X | X | X | X | X |
| HDMI | X | X | X | X | X | X | X | X | X |

Using the Digital NR (Noise Reduction) Feature

If the signal received by your television is weak, you can activate this feature to help reduce any static and ghosting that may appear on the screen.

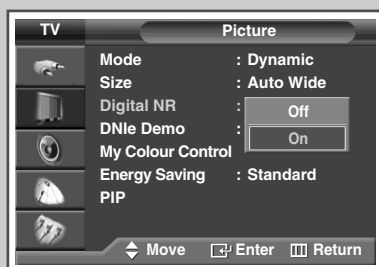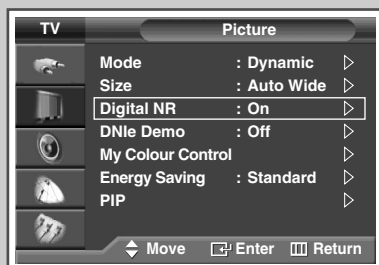

- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Picture**.
Result: The **Picture** menu is displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▲** or **▼** button to select **Digital NR**.
Press the **ENTER** () button.
- 5 Select **off** or **on** by pressing the **▲** or **▼** button.
Press the **ENTER** () button.


Preventing Screen Burn-in

To reduce the possibility of screen burn, this TV set is equipped with screen burn prevention technology. This technology enables you to set picture movement up/down (Vertical Line) and side to side (Horizontal Dot). The Time setting allows you to program the time between movement of the picture in minutes.


- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Setup**.
Result: The **Setup** menu is displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▲** or **▼** button to select **Screen Burn Protection**. Press the **ENTER** () button.
Result: The **Screen Burn Protection** menu is displayed with the **Pixel Shift** selected.
- 5 Press the **ENTER** () button again.
Result: The **Pixel Shift** menu is selected.
- 6 Press the **ENTER** () button.
Select **On** by pressing the **▲** or **▼** button for making the screen move per regular hour and preventing the residual image.
Press the **ENTER** () button.
➤ **Pixel Shift:** Using this function, you can minutely move pixels on the PDP in horizontal or vertical direction to minimize after image on the screen.
- 7 Select the required option (**Horizontal Dot**, **Vertical Line**, or **Time**) by pressing the **▲** or **▼** button.
Press the **ENTER** () button.
- 8 Press the **▲** or **▼** button until you reach the optimal setting.
Press the **ENTER** () button.

- Optimum condition for pixel shift;

| | |
|-----------------------|----------|
| Horizontal Dot | 2 |
| Vertical Line | 4 |
| Time(Minutes) | 4 |

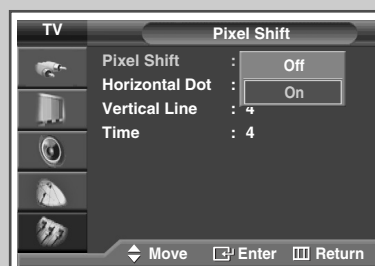

Reducing the Effects of Screen Burn

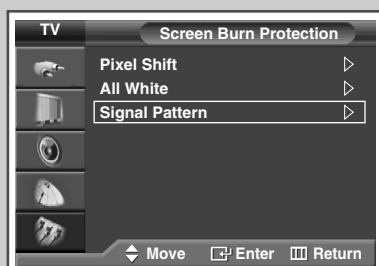

If screen burn has occurred, you can select a white screen or signal pattern (rolling screen) to help remove screen burn artifacts.

- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Setup**.
Result: The **Setup** menu is displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▲** or **▼** button to select **Screen Burn Protection**. Press the **ENTER** () button.
Result: The **Screen Burn Protection** menu is displayed.
- 5 Press the **▲** or **▼** button to select the option (**All White** or **Signal Pattern**). Press the **ENTER** () button.
 - **All White:** This function helps remove after images on the screen by changing the colour of pixels to white. Use this function when there are remaining after images or symbols on the screen especially when you displayed a still image on the screen for a long time.
 - **Signal Pattern:** This function helps remove after images on the screen by moving all the pixels on the PDP according to a pattern. Use this function when there are remaining after images or symbols on the screen especially when you displayed a still image on the screen for a long time.
- 6 Press the **ENTER** () button to cancel the currently selected function.

- To remove after images on the screen, use either "**All White**" or "**Signal Pattern**" function. Although both of the two functions remove after images on the screen, "**Signal Pattern**" is more effective.
- The after image removal function has to be executed for a long time (approximately 1 hour) to effectively remove after images on the screen. If after image is not improved after the execution of the function, repeat the function again.

Changing the Sound Standard

You can select the type of special sound effect to be used when watching a given broadcast.

- 1 Press the **MENU** () button.

Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button to select **Sound**.

Result: The **Sound** menu is displayed.

- 3 Press the **ENTER** () button.

Result: The **Mode** is selected.

- 4 Press the **ENTER** () button again.

- 5 Select the required option by pressing the **▲** or **▼** button.

 



Result: The following options are available.

Standard - Music - Movie - Speech - Custom



- ◆ Choose **Standard** for the standard factory settings.
- ◆ Choose **Music** when watching music videos or concerts.
- ◆ Choose **Movie** when watching movies.
- ◆ Choose **Speech** when watching a show that is mostly dialog (i.e., news).
- ◆ Choose **Custom** to recall your personalized settings (see "Customizing the Sound Settings", page 44).

- 6 Press the **ENTER** () button.

- You can select these options by simply pressing the **S.MODE** (: Sound Mode) button on the remote control.

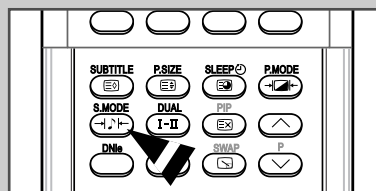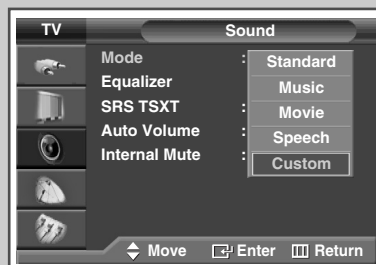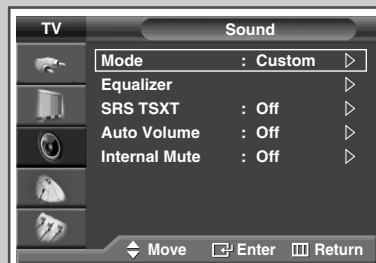

Customizing the Sound Settings

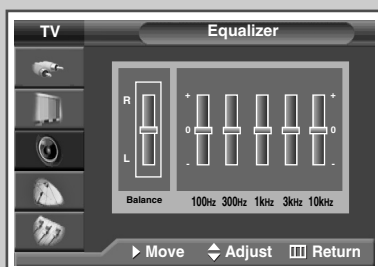
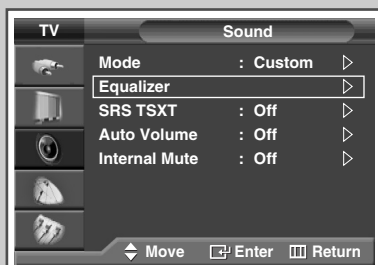


Your television has several settings which allow you to control the sound quality.

- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Sound**.
Result: The **Sound** menu is displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▲** or **▼** button to select **Equalizer**.
Press the **ENTER** () button.
Result: The **Equalizer** menu is displayed.
- 5 Select the required option (balance or equalizer) by pressing the **◀** or **▶** button.
- 6 Press the **▲** or **▼** button until you reach the optimal setting.
Press the **ENTER** () button.

➤ If you make any changes to the sound settings, the sound standard is automatically switched to **Custom**.

Adjusting the Volume Automatically

 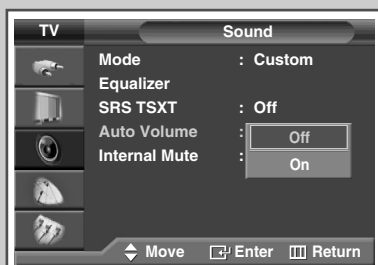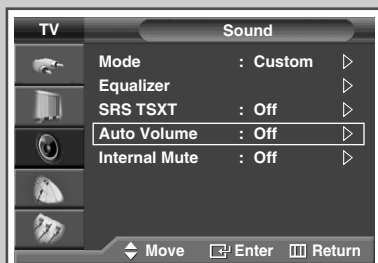





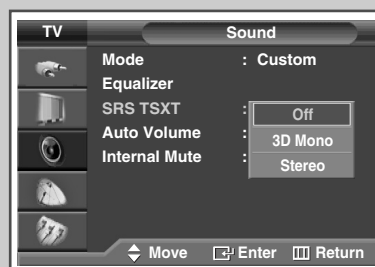
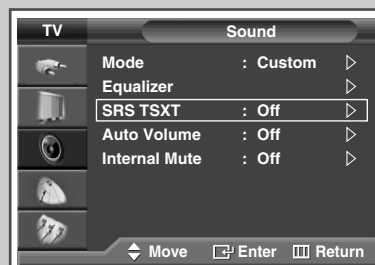
Each broadcasting station has its own signal conditions, and so it is not easy for you to adjust the volume every time the channel is changed. This feature lets you automatically adjust the volume of the desired channel by lowering the sound output when the modulation signal is high or by raising the sound output when the modulation signal is low.

- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Sound**.
Result: The **Sound** menu is displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▲** or **▼** button to select **Auto Volume**.
Press the **ENTER** () button.
- 5 Select **Off** or **On** by pressing the **▲** or **▼** button.
Press the **ENTER** () button.



Setting the TruSurround XT

TruSurround XT is a patented SRS technology that solves the problem of playing 5.1 multichannel content over two speakers. TruSurround delivers a compelling, virtual surround sound experience through any two-speaker playback system, including internal television speakers. It is fully compatible with all multichannel formats.

- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Sound**.
Result: The **Sound** menu is displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▲** or **▼** button to select **SRS TSXT**.
Press the **ENTER** () button.
- 5 Select the required option by pressing the **▲** or **▼** button.
Result: The following options are available.
Off - 3D Mono - Stereo
- 6 Press the **ENTER** () button.



Selecting the Internal Mute

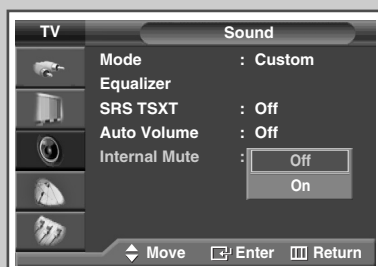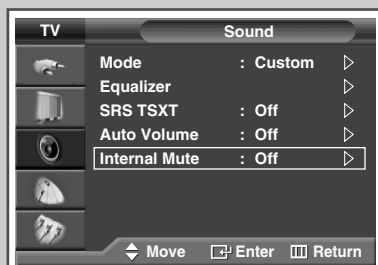

If you want to hear the sound through separate speakers, cancel the internal amplifier.

- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Sound**.
Result: The **Sound** menu is displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▲** or **▼** button to select **Internal Mute**.
Press the **ENTER** () button.
- 5 Select **Off** or **On** by pressing the **▲** or **▼** button.
Press the **ENTER** () button.

Setting the Melody Sound



You can hear melody sound when the television is powered on or off.


- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Setup**.
Result: The **Setup** menu is displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▲** or **▼** button to select **Melody**.
Press the **ENTER** () button.
- 5 Select **Off** or **On** by pressing the **▲** or **▼** button.
Press the **ENTER** () button.

Selecting the Sound Mode (depending on the model)


The “DUAL I-II” button displays/controls the processing and output of the audio signal. When power is switched on, the mode is automatically preset to either “DUAL-I” or “Stereo”, depending on the current transmission.


| | Type of broadcast | On-screen indication |
|---------------------|------------------------------------|--|
| NICAM Stereo | Regular broadcast (Standard audio) | Mono (Normal use) |
| | Regular + NICAM Mono | NICAM Mono ↔ Mono |
| | NICAM stereo | NICAM stereo ↔ Mono (Forced mono) |
| | NICAM DUAL-I/II | NICAM DUAL-I → NICAM DUAL-II → Mono |
| A2 Stereo | Regular broadcast (Standard audio) | Mono |
| | Bilingual or DUAL-I/II | DUAL-I ↔ DUAL-II |
| | Stereo | Stereo ↔ Mono (Forced mono) |

- ◆ If the receiving conditions deteriorate, listening will be easier if the mode is set to **Mono**.
- ◆ If the stereo signal is weak and automatic switching occurs, switch to **Mono**.
- ◆ When receiving mono sound in AV mode, connect to the “AUDIO-L” input connector on the panel (front or side, depending on the model). If mono sound only comes out of the left speaker, press the **DUAL I-II** button.

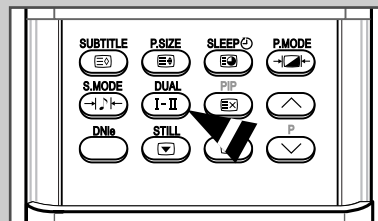



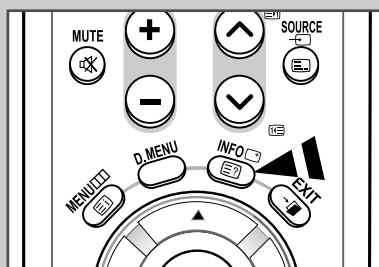


Setting and Displaying the Current Time



You can set the television's clock so that the current time is displayed by pressing the "INFO ()" button. You must also set the time if you wish to use the automatic on or off timers.




 

- When pressing the power button (On/Off) on the panel of the television, the clock setting will be reset.

- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Setup**.
Result: The **Setup** menu is displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▲** or **▼** button to select **Time**.
Press the **ENTER** () button.
Result: The **Clock Set** is selected.
- 5 Press the **ENTER** () button again.
- 6 Press the **◀** or **▶** button to select **Hour** or **Minute**.
Set these by pressing the **▲** or **▼** button.
➤ You can also set these by pressing the numeric buttons directly.
- 7 Press the **ENTER** () button.

 

- In the event of a power interruption or the set being turned off at the supply, the settings for the Clock will be lost.

Setting the Sleep Timer

You can select a time period of between 30 and 180 minutes after which the television automatically switches to Standby mode.

- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Setup**.
Result: The **Setup** menu is displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▲** or **▼** button to select **Time**.
Press the **ENTER** () button.
Result: The **Time** menu is displayed.
- 5 Press the **▲** or **▼** button to select **Sleep Timer**.
Press the **ENTER** () button.
- 6 Select the preset time interval (**Off**, **30**, **60**, **90**, **120**, **150**, or **180**) for staying on by pressing the **▲** or **▼** button.
Press the **ENTER** () button.

- ◆ You can select these options simply by pressing the **SLEEP** button on the remote control.
- ◆ If the sleep timer is not yet set, **Off** is displayed.
If the sleep timer is already set, the remaining time before which the television switches to standby mode is displayed.

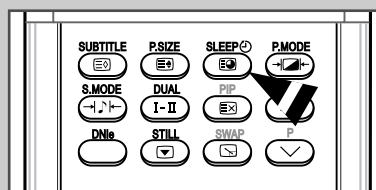

Switching the Television On and Off Automatically



You can set the on or off timers so that the television will:

- ◆ Switch on automatically and tune to the channel of your choice at the time you select.
- ◆ Switch off automatically at the time you select.

➤ The first step is to set the television's clock (refer to "Setting and Displaying the Current Time" on page 48).

1 Press the **MENU** () button.

Result: The main menu is displayed.

2 Press the **▲** or **▼** button to select **Setup**.

Result: The **Setup** menu is displayed.

3 Press the **ENTER** () button.

4 Press the **▲** or **▼** button to select **Time**.
Press the **ENTER** () button.

Result: The **Time** menu is displayed.

5 Press the **▲** or **▼** button to select **On Timer**.
Press the **ENTER** () button.

Result: The **On Timer** menu is displayed.

6 Select **Hour**, **Minute**, **Programme**, or **Volume** by pressing the **◀** or **▶** button.
Set these by pressing the **▲** or **▼** button.

➤ You can also set these by pressing the numeric buttons directly.

7 Press the **◀** or **▶** button to select **Activation**.

8 To activate **On Timer** with the setting entered, select **Yes** by pressing the **▲** or **▼** button.

9 Press the **ENTER** () button.

Result: The **Time** menu is displayed again.

Switching the Television On and Off Automatically (continued)

- 10 Press the ▲ or ▼ button to select **Off Timer**.
Press the **ENTER** (↵) button.

Result: The **Off Timer** menu is displayed.

- 11 Select **Hour** or **Minute** by pressing the ◀ or ▶ button.
Set these by pressing the ▲ or ▼ button.

➤ You can also set these by pressing the numeric buttons directly.

- 12 Press the ◀ or ▶ button to select **Activation**.



- 13 To activate **Off Timer** with the setting entered, select **Yes** by pressing the ▲ or ▼ button.

- 14 Press the **ENTER** (↵) button.




➤ Auto Power Off

When you set the timer “On”, the television will eventually turn off, if no controls are operated for 3 hours after the TV was turned on by timer. This function is only available in timer “On” mode and prevents overheating or leakages, which may occur if a TV is on for too long (when you are on vacation, for example).

- If no signal is received for 15 minutes, the TV will be automatically turned off.

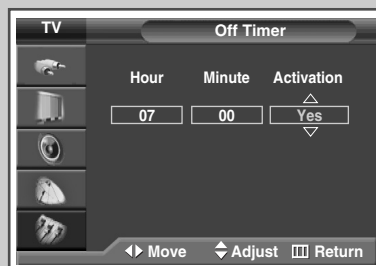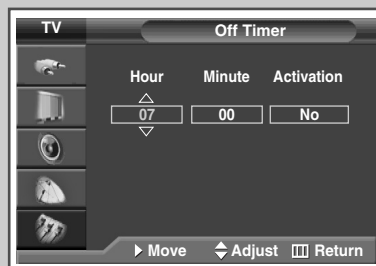

Viewing an External Signal Source

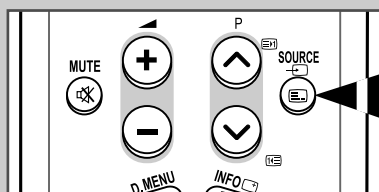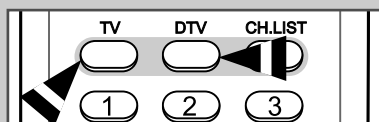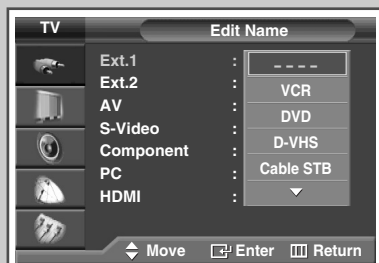

Use the remote control to switch between viewing signal from connected equipment, such as VCR, DVD, Set-Top box, and the TV source (broadcast or cable).

- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **ENTER** () button to select **Input**.
Result: The **Input** menu is displayed.
- 3 Press the **ENTER** () button.
Result: The **Source List** is selected.
- 4 Press the **ENTER** () button again.
- 5 Press the **▲** or **▼** button to select the signal source, press the **ENTER** () button.
Result: The available signal sources are listed.
➤ ♦ **TV, DTV, Ext.1, Ext.2, AV, S-Video, Component, PC, or HDMI** : on the TV's rear panel.
♦ You can also set these options simply by pressing the **SOURCE** () button on the remote control.
- 6 Press the **MENU** () button.
Result: The main menu is displayed.
- 7 Press the **ENTER** () button to select **Input**.
Result: The **Input** menu is displayed again.
- 8 Press the **▲** or **▼** button to select **Edit Name**. Press the **ENTER** () button.
- 9 Press the **▲** or **▼** button to select external source to be edited. Press the **ENTER** () button.
Result: The available device names are listed.
VCR, DVD, D-VHS, Cable STB, HD STB, Satellite STB, AV Receiver, DVD Receiver, Game, Camcorder, DVD Combo, DHR (DVD HDD Recorder), or PC
- 10 Select the required device by pressing the **▲** or **▼** button. Press the **ENTER** () button.

➤ If you change the external source while viewing, pictures might take a short period of time to switch.

➤ To watch television programme again, press the **TV** or **DTV** button and select the channel number required.

Redirecting an Input to the External Output

Your television enables you to choose which audio/video signals are output to the external connector.

- 1 Press the **MENU** () button.

Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button to select **Setup**.

Result: The **Setup** menu is displayed.

- 3 Press the **ENTER** () button.

- 4 Press the **▲** or **▼** button to select **AV Setup**.
Press the **ENTER** () button.

Result: The **AV Setup** menu is displayed.

- 5 Press the **▲** or **▼** button to select required input (**Ext.2**).
Press the **ENTER** () button. Select the source to be directed to the output by pressing the **▲** or **▼** button.





- ◆ **Ext.1** : Default (**TV**)
- ◆ **Ext.2** : Variable (**TV**, **DTV**, **Ext.1**, **Ext.2**, **AV**, **S-Video**, or **Monitor Out**)

- 6 Press the **ENTER** () button.

- Monitor OUT corresponds to the Video OUT port of the TV.




Previewing the DTV Menu System

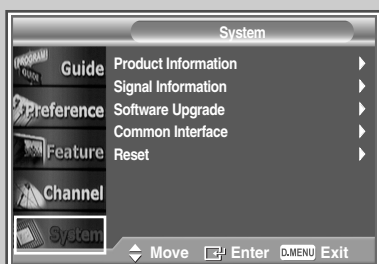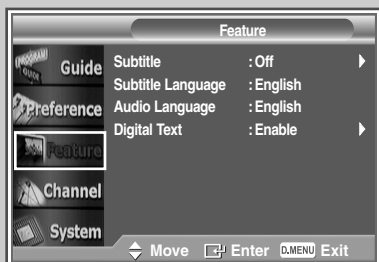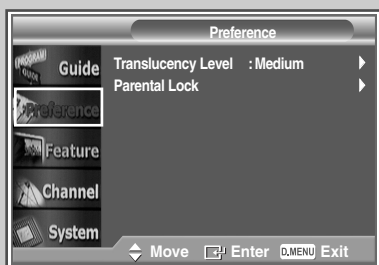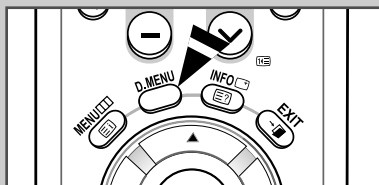

- Available in DTV mode.
Preset to the DTV mode by using the **DTV** button on your remote control.

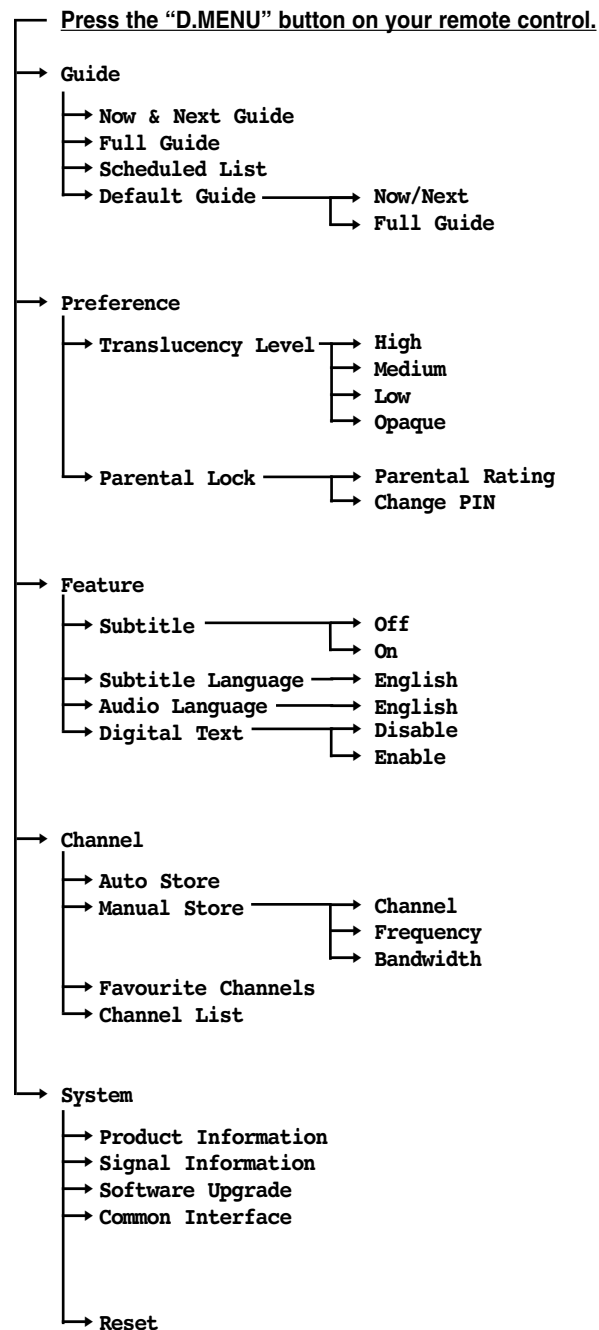


To help you navigate around the on-screen menu system and adjust the various settings available, refer to the following illustration.




- The sub-items of the CI Menu may vary depending on the CAM model.
(refer to page 72)




Updating the Channel List Automatically

You can update the channel list when the broadcaster adds new Services or if you move the TV to a new location.

- 1 Press the **D.MENU** button.
Result: The DTV menu is displayed.
 - 2 Press the **▲** or **▼** button to select **Channel**.
Result: The **Channel** menu is displayed.
 - 3 Press the **ENTER** () button.
Result: The **Auto Store** is displayed.
 - 4 Press the **ENTER** () button again to start the search.
Result: When it has finished, the number of scanned services will be displayed.
 - ◆ The existing favourite channel list will not be deleted when the channel list is updated.
 - ◆ To stop the scan before it has finished, press the **ENTER** () button with **Stop** selected.
 - 6 Press the **D.MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.
- If the signal status is poor, the **"No service found! Check the aerial connection."** message is displayed.

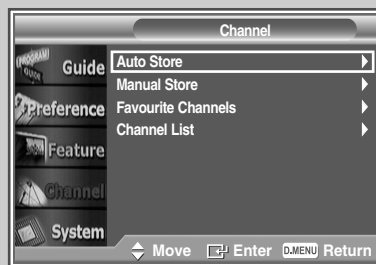

Updating the Channel List Manually

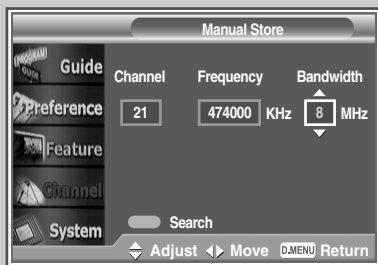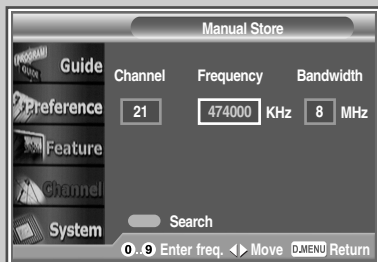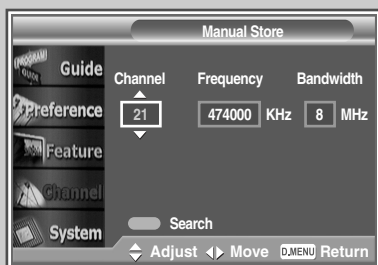

You can specify the channel or frequency for a fast channel search.

- 1 Press the **D.MENU** button.

Result: The DTV menu is displayed.

- 2 Press the **▲** or **▼** button to select **Channel1**.

Result: The **Channel1** menu is displayed.

- 3 Press the **ENTER** (**↵**) button.

- 4 Press the **▲** or **▼** button to select **Manual Store**. Press the **ENTER** (**↵**) button.

Result: The **Manual Store** is displayed.

- 5 Press the **◀** or **▶** button to select **Channel**, **Frequency**, or **Bandwidth**.

◆ Channel

Press the **▲**, **▼** or numeric buttons (0~9) to select a channel. The available channels are 21~68.

Result: The corresponding frequency for the selected channel is automatically set.

◆ Frequency

You can specify the frequency (KHz) using the numeric buttons (0~9). If you do not know the exact frequency, follow the above step to select the frequency automatically using channel.

◆ Bandwidth

Press the **▲** or **▼** button to select a bandwidth. The available bandwidths are 7 and 8 MHz.

- 6 Press the red button to start the scan for digital services.

Result: When it has finished, channels are updated in the channel list.

- 7 Press the **D.MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.

Editing Your Favourite Channels

➤ In the case of DTV mode, **OK** or **Select** can be used as the **ENTER** (↵) button.

You can edit your favourite channels using the colour buttons.

1 Press the **D.MENU** button.

Result: The DTV menu is displayed.

2 Press the ▲ or ▼ button to select **Channel**.

Result: The **Channel** menu is displayed.

3 Press the **ENTER** (↵) button.

4 Press the ▲ or ▼ button to select **Favourite Channels**.

5 Press the **ENTER** (↵) button.

Result: The **Favourite Channels** menu is displayed.

6 Press the red button to display all currently stored channels.



7 Press the ▲ or ▼ button to select a channel you want.
Press the **ENTER** (↵) button.

Result: A "★" icon is shown next to the selected channel and the channel will be added to the favourites list.

- ◆ To undo, press the **ENTER** (↵) button again.
- ◆ **Select All** : Select all channels currently displayed.
- ◆ **Select None** : Deselect all selected channels.
- ◆ **Preview** : Displays (a) currently selected channel(s).

➤ The Favourite Channels settings have been completed.




8 Press the **D.MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.

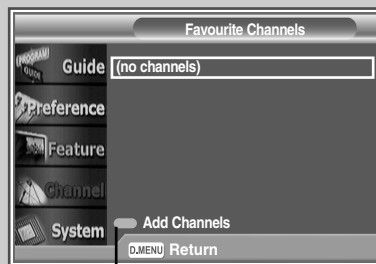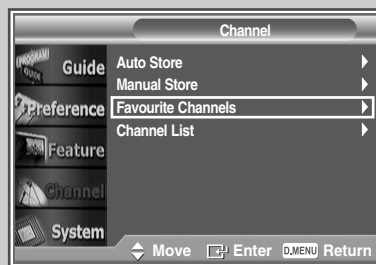

Editing Your Favourite Channels (continued)

◆ Add

You can use this function when one or more favourite channels have been selected.

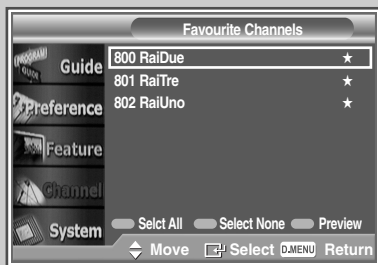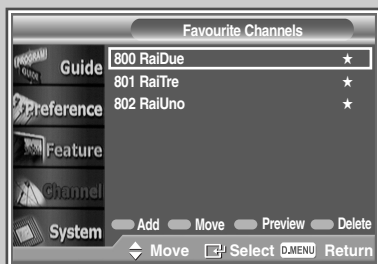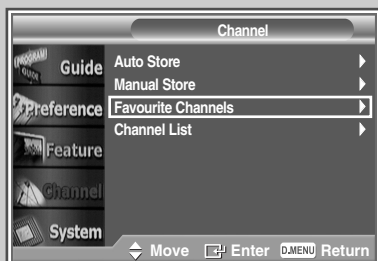

- 1 Press the **D.MENU** button.
Result: The DTV menu is displayed.
- 2 Press the ▲ or ▼ button to select **Channel**.
Result: The **Channel** menu is displayed.
- 3 Press the **ENTER** (⏏) button.
- 4 Press the ▲ or ▼ button to select **Favourite Channels**.
- 5 Press the **ENTER** (⏏) button.
- 6 Press the red button in the **Favourite Channels** menu.
To add more channels, refer to the step 7 on the previous page.
 - ◆ To add all channels to the favourites channel list, press the red button.
 - ◆ To remove all channels, press the green button.
 - ◆ **Preview** : Displays (a) currently selected channel(s).
 - ◆ Press the **CH.LIST** button to display the favourite channel list.
- 7 Press the **D.MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.

Editing Your Favourite Channels (continued)

◆ Move




- 1 Press the **D.MENU** button.
Result: The DTV menu is displayed.
- 2 Press the ▲ or ▼ button to select **Channel**.
Result: The **Channel** menu is displayed.
- 3 Press the **ENTER** (↵) button.
- 4 Press the ▲ or ▼ button to select **Favourite Channels**.
- 5 Press the **ENTER** (↵) button.
- 6 Press the ▲ or ▼ button to select the required channel.
- 7 Press the green button.
Result: A “◆” icon is displayed on the left side of the channel name.
- 8 Press the ▲ or ▼ button to select the channel that you want to move, then press the green or **ENTER** (↵) button.
Result: The channel is moved to its new position.
- 9 Press the **D.MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.

◆ Preview


- 1 In the **Favourite Channels** menu, select the channel to be previewed by pressing the ▲ or ▼ button.
- 2 Press the yellow button.
Result: Displays currently selected channel.
- 3 Press the **D.MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.

◆ Delete

- 1 In the **Favourite Channels** menu, select the channel to be deleted from the favourite channels list by pressing the ▲ or ▼ button.
- 2 Press the blue button.
Result: The selected channel and number will be deleted.
➤ To add a deleted channel back in to the favourite channel list, see 'Add' on page 58.
- 3 Press the **D.MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.

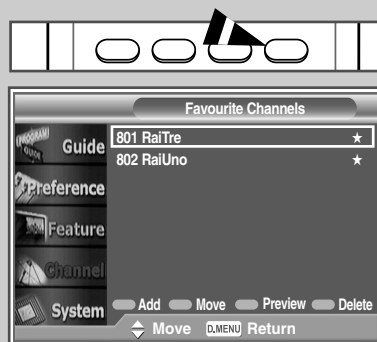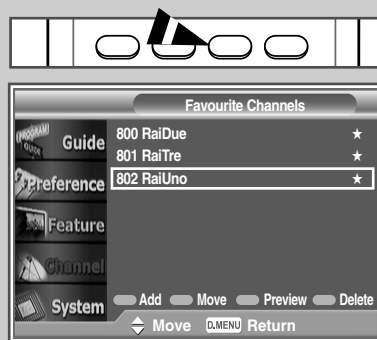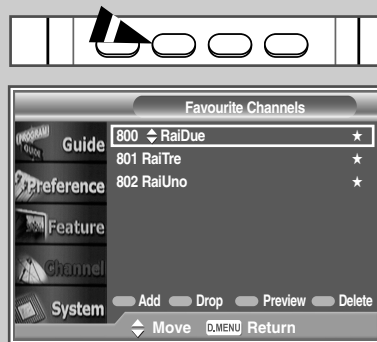

Viewing Channel Lists

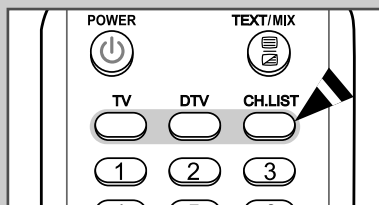

You can display a list of all channels or your favourite channels.

- 1 Press the **D.MENU** button.

Result: The DTV menu is displayed.

- 2 Press the **▲** or **▼** button to select **Channel1**.

Result: The **Channel1** menu is displayed.

- 3 Press the **ENTER** (**↵**) button.

- 4 Press the **▲** or **▼** button to select **Channel List**.
Press the **ENTER** (**↵**) button.

Result: The channel list is displayed.

➤ It can be displayed simply by pressing the **CH. LIST** button.

- 5 Press the yellow button to toggle between your favourite channels and all channels.

Result: Your favourite channels are only displayed if they were previously set in the **Favourite Channels** menu (refer to page 57~59).


- 6 Press the red or green button to display the previous or next channel list page.

- 7 Press the **▲** or **▼** button to select a channel to be tuned.
Press the **ENTER** (**↵**) button.

Result: The channel number, name and an icon are displayed in the top left corner while changing the channel.
The channel number and name are displayed if the channel is one of the all channels, and a "★" icon if the channel is one of the favourite channels.

- 8 Press the blue or **CH. LIST** button to exit from the channel list.

Displaying Programme Information

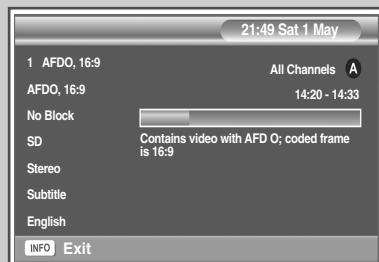

While viewing a channel, additional information about the current programme may be displayed.

- 1 While viewing a programme, press the **INFO** (**ⓘ**) button.

Result: The programme information is displayed.

➤ The information is displayed:

- Parental Rating
- Video Type: SD, HD, Radio
- Audio Type: MPEG, Dolby-AC3
- Existence of Teletext or DVB Subtitle
- Audio Language

- 2 To exit from banner information, press the **INFO** (**ⓘ**) button.

Viewing the EPG (Electronic Programme Guide) Information

The EPG (Electronic Programme Guide) information is provided by the broadcasters. Programme entries may appear blank or out of date as a result of the information broadcast on a given channel. The display will dynamically update as soon as new information becomes available.

◆ Now & Next Guide


For the six channels indicated in the left-hand column, displays the Current programme and the Next programme information.

 
◆ Full Guide

Displays the programme information as time ordered 30 minute segments. One and half hours of programme information is displayed which may be scrolled forwards or backwards in time.

- 1 Press the **D.MENU** button.

Result: The DTV menu is displayed.

- 2 Press the **ENTER** () button to select **Guide**.

- 3 Press the **▲** or **▼** button to select **Now & Next Guide** or **Full Guide**. Press the **ENTER** () button.


Result: The selected guide menu is displayed.

➤ You can also display the guide menu simply by pressing the **GUIDE** button.

 
- 4 **To** **Then**

Watch a programme in the EPG list

- ◆ Select a programme by pressing the **▲/▼/◀/▶** button.
- ◆ Press the **ENTER** () button.

➤ If the next program is selected, it is scheduled with the clock icon displayed. If the **ENTER** () button is pressed again, the scheduling is canceled with the clock icon gone. For details about scheduling programmes, refer to the next page.

View programme information

- ◆ Select a programme of your choice by pressing the **▲/▼/◀/▶** button.
- ◆ Press the **INFO** () button when the programme of your choice is highlighted.

Toggle between the **Now & Next Guide** or **Full Guide**

- ◆ Press the red button repeatedly.

Display the **Favourites** and the **All Channels** list

 
 
 
- ◆ Press the green button repeatedly.




View Categories

- ◆ Press the yellow button.

Exit the guide







- ◆ Press the blue button.



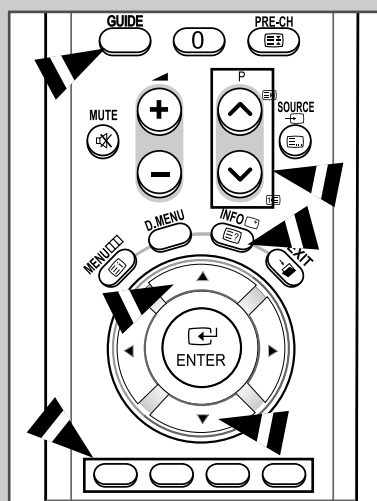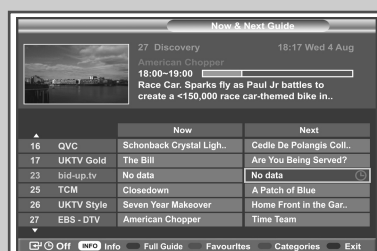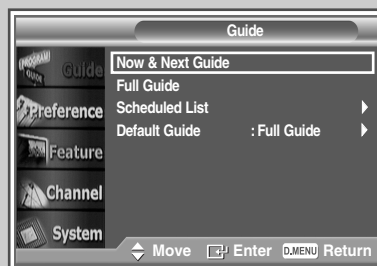-
- ◆ Information such as the channel number, programme title and running time, status bar, and brief summary of the highlighted programme will be displayed in the top right corner of the screen. If there is a lengthy summary, "... " will be displayed. Press the **INFO** () button for the full summary text.
 - ◆ Six channels are displayed. To scroll between channels, move to a channel using the **▲** or **▼** button. To display page by page, use the **P**  or  button.



 Using the Scheduled List

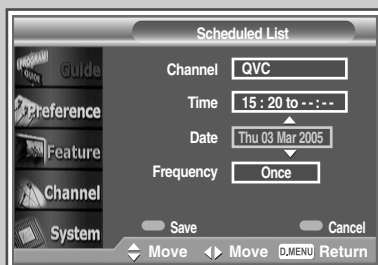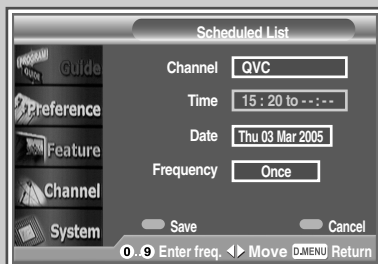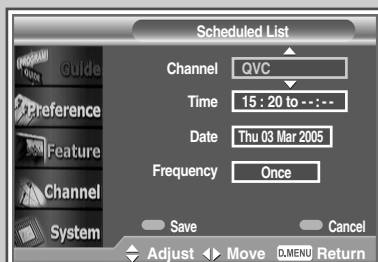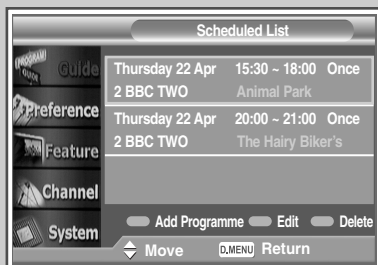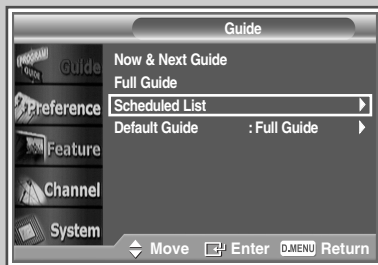
If you make a scheduled viewing list of programs you may like to see, the channel will be automatically switched to the scheduled program at the scheduled time even if you are watching another program.



- 1 Press the **D.MENU** button.
Result: The DTV menu is displayed.
- 2 Press the **ENTER** () button to select **Guide**.
- 3 Select the **Scheduled List** by pressing the **▲** or **▼** button.
Press the **ENTER** () button.
Result: The selected guide menu is displayed.
- 4 Press the red button to add a new programme.
Result: The menu for adding a programme is displayed with **Channel** selected.
- 5 Press the **▲** or **▼** button to select the required channel.
Press the **►** button.
Result: The **Time** is selected.
- 6 Enter the start and stop time of the programme by pressing the numeric button.
Result: The **Date** is selected automatically, even if any button is not pressed.
- 7 Press the **▲** or **▼** button to select the required date.
Press the **►** button.
Result: The **Frequency** is selected.

Using the Scheduled List (continued)


- 8 Press the ▲ or ▼ button to select the required frequency (**Once**, **Daily**, or **Weekly**).
 - 9 When you are satisfied with your settings, save the adjusted schedule by pressing the red button.
Result: The scheduled list is displayed again.
 - 10 If you want to edit the scheduled programme, select a programme by pressing the ▲ or ▼ button. Press the green button. If necessary, select the programme to be deleted by pressing the ▲ or ▼ button. Press the blue button.
 - 11 Repeat step 4 to 9 for other programme to be added to the scheduled list.
- When watching analog TV, the reserved DTV channel cannot be changed. The channel is only changed automatically to the reserved channel when you are watching DTV.
 - The more simple and easy way for scheduling programmes, refer to the step 5 on page 61.
 - Scheduling programme only functions with the television already turned on, and not from standby mode. For details about switching the television on and off automatically, refer to page 13.

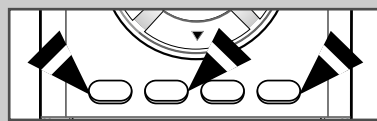

Setting the Default Guide




 
You can preset the default guide style.




- 1 Press the **D.MENU** button.
Result: The DTV menu is displayed.
- 2 Press the **ENTER** (↵) button to select **Guide**.
- 3 Press the ▲ or ▼ button to select **Default Guide**. Press the **ENTER** (↵) button.
- 4 Select the required option (**Now & Next Guide** or **Full Guide**) by pressing the ▲ or ▼ button. Press the **ENTER** (↵) button.
Result: The selected option is stored and the preset/default channel list in the EPG menu and channel list will be displayed.
- 5 Press the **D.MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.




 Viewing All Channels and Favourite Channels

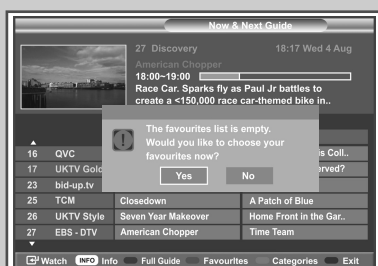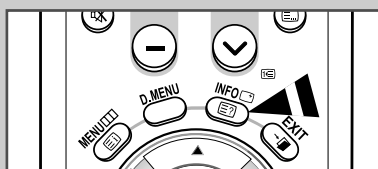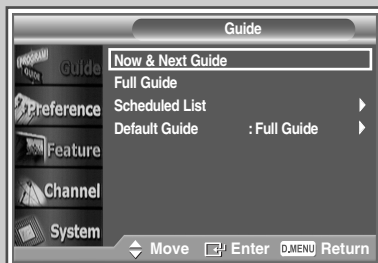  In the EPG menu, you can display all channels or favourite channels.









- 1 Press the **D.MENU** button.
Result: The **Guide** menu is displayed.
- 2 Press the **ENTER** () button to select **Guide**.
- 3 Press the **▲** or **▼** button to select **Now & Next Guide** or **Full Guide**. Press the **ENTER** () button.
Result: The selected guide menu is displayed.
- 4 Press the green button repeatedly to toggle between the all and favourite channels list.
- 5 Select a programme of your choice by pressing the **▲**, **▼**, **◀**, or **▶** button.
- 6 Press the **INFO** () button to display information about the highlighted programme.
Result: The available programme information is displayed.
- 7 When the favourite channel list has not been set up:
 - ◆ **The favourites list is empty. Would you like to choose your favourites now?** message is displayed.
 - ◆ Select **Yes**.
Result: The **Favourite Channels** menu is displayed. If you select **No**, all channels will remain unchanged.
 - ◆ To edit the favourite channels, refer to page 57~59 for more details.
- 8 Press the **D.MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.

- ◆ **All Channels** is the list of channels that have been scanned by the channel list update. All channels are displayed in the all channel mode.
- ◆ **Favourites** (favourite channels) is the list of channels that has been set in the **Favourite Channels** menu (refer to page 57~59).
- ◆ When there is no channel information, the **"No Data"** message will be displayed and you will not be able to change the channel even if you press the **ENTER**() button.
When the **"No Data"** message appears and you cannot change the channel, press the channel number directly using the numeric buttons.



Selecting Category Colours

 You can change the colours for Categories.

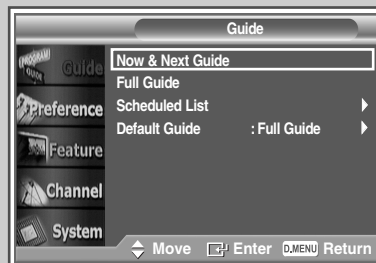


- 1 Press the **D.MENU** button.
Result: The **Guide** menu is displayed.
- 2 Press the **ENTER** () button to select **Guide**.
- 3 Press the **▲** or **▼** button to select **Now & Next Guide** or **Full Guide**. Press the **ENTER** () button.
Result: The selected guide menu is displayed.
- 4 Press the yellow button.
Result: A pop up screen that enables you to select category colours is displayed.
- 5 Select a category by pressing the **▲** or **▼** button.
- 6 Press the **ENTER** () button.
Result: The selectable colours are displayed on the right side of the screen.
- 7 Select a colour by pressing the **▲** or **▼** button.
Result: The colour selected for a category is stored and the colours for the programme slots of the EPG will change to that selection.
- 8 Press the **ENTER** () button to change the setting.
- 9 Press the **D.MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.

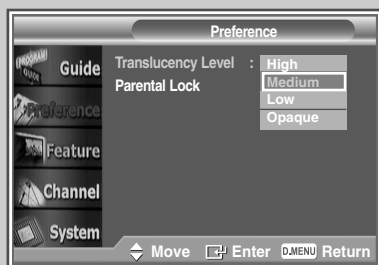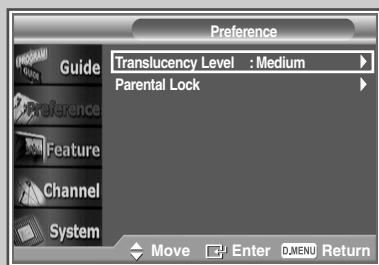

Adjusting the Translucency Level



 You can set the translucency of the on-screen menu.

- 1 Press the **D.MENU** button.
Result: The DTV menu is displayed.
- 2 Press the **▲** or **▼** button to select **Preference**.
Result: The **Preference** menu is displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▲** or **▼** button to select **Translucency Level**.
Press the **ENTER** () button.
- 5 Select the required option(**High**, **Medium**, **Low**, or **Opaque**) by pressing the **▲** or **▼** button. Press the **ENTER** () button to change the setting.
- 6 Press the **D.MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.

Setting up the Parental Lock

This feature allows you to prevent unauthorized users, such as children, from watching unsuitable programmes by a 4-digit PIN (Personal Identification Number) code that is defined by the user. The on-screen menu will instruct you to assign a PIN code (you can change it later, if necessary).

- 1 Press the **D.MENU** button.

Result: The DTV menu is displayed.

- 2 Press the **▲** or **▼** button to select **Preference**.

Result: The **Preference** menu is displayed.

- 3 Press the **ENTER** (**↵**) button.

- 4 Press the **▲** or **▼** button to select **Parental Lock**. Press the **ENTER** (**↵**) button.

Result: The **Enter PIN** is displayed.

- 5 Enter your current 4-digit PIN code by using the numeric buttons (0~9).

Result: The **Parental Lock** menu are displayed with the **Parental Rating** selected.

- ♦ The default PIN code for a new TV set is **0000**.
- ♦ If you enter an invalid PIN code, the **Invalid PIN code. Please try again.** message is displayed.

- 6 Press the **ENTER** (**↵**) button.

- 7 Press the **▲** or **▼** button to select the age rating you want to lock out. Press the **ENTER** (**↵**) button.

- 8 If you want to change the PIN code, select **Change PIN** by pressing the **▲** or **▼** button. Press the **ENTER** (**↵**) button.

Result: The **Enter New PIN** is displayed.

- 9 Enter your new PIN code by using the numeric buttons (0~9).

Result: The **Confirm New PIN** is displayed.







- 10 Re-enter your new PIN code to confirm by using the numeric buttons (0~9).

Result: The **Your PIN code has been changed successfully** message is displayed.





- 11 Press the **ENTER** (**↵**) button.

- 12 Press the **D.MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.

- If you forget the PIN code, press the remote control buttons in the following sequence, which resets the PIN to **0-0-0-0** : **POWER** (Off), **MUTE**, **8**, **2**, **4**, **POWER** (On)

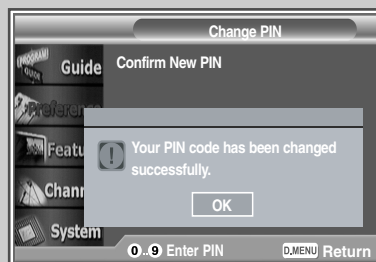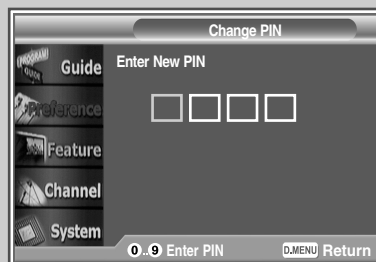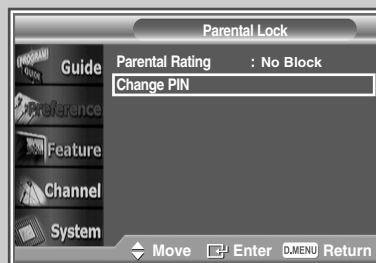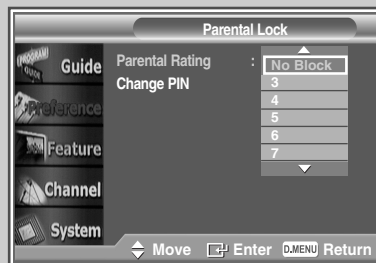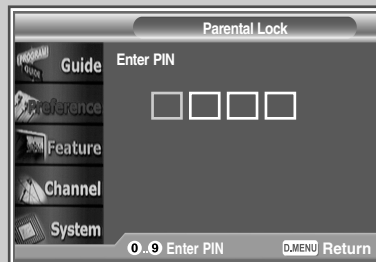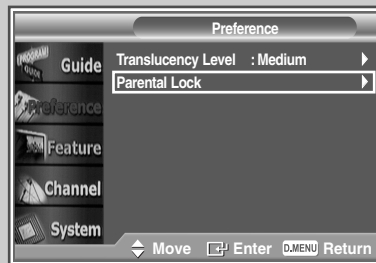

Using the Preferred Features

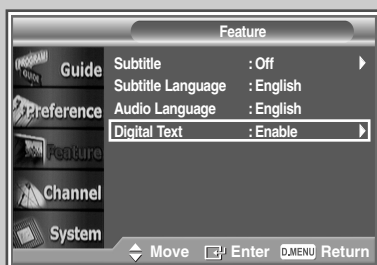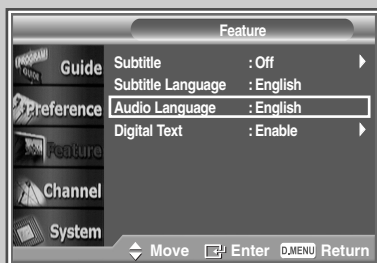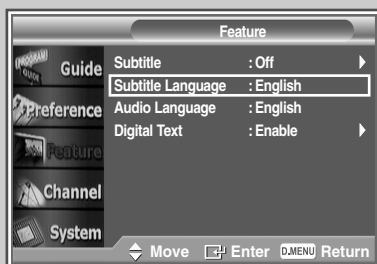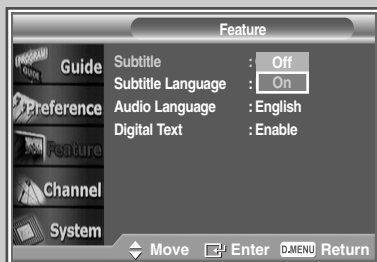

You can use various settings to suit your personal preferences.

- ◆ **Activating/deactivating the Subtitle**
- ◆ **Changing the default value for subtitle and audio languages**
- ◆ **Activating/deactivating the Digital Text**

- 1 Press the **D.MENU** button.

Result: The DTV menu is displayed.

- 2 Press the **▲** or **▼** button to select **Feature**.

Result: The **Feature** menu is displayed.

- 3 Press the **ENTER** (**↵**) button.

- ◆ **Subtitle**
- ◆ **Subtitle Language**
- ◆ **Audio Language**
- ◆ **Digital Text**

- 4 Select your required menu by pressing the **▲** or **▼** button.

- 5 Press the **ENTER** (**↵**) button.

Result: The options of the selected menu are displayed.

- 6 Select the required option by pressing the **▲** or **▼** button, and press the **ENTER** (**↵**) button to change the setting.

- ◆ **Subtitle : On or Off**
- ◆ **Subtitle Language**
- ◆ **Audio Language**
- ◆ **Digital Text : Disable or Enable**

➤ If the programme is broadcast with digital text, this feature is enabled.


- 7 Press the **D.MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.

- ◆ **MHEG (Multimedia and Hypermedia Information Coding Experts Group)?**
An International standard for data encoding systems used in multimedia and hypermedia. This is at a higher level than the MPEG system which includes data-linking hypermedia such as still images, character service, animation, graphic and video files as well as multimedia data. MHEG is user runtime interaction technology and is being applied to various fields including VOD (Video-On-Demand), ITV (Interactive TV), EC (Electronic Commerce), tele-education, tele-conferencing, digital libraries and network games.

Checking the Product Information

You can view your product information. For service or repair, please contact a Samsung approved dealer.



- 1 Press the **D.MENU** button.
Result: The DTV menu is displayed.
- 2 Press the **▲** or **▼** button to select **System**.
Result: The **System** menu is displayed.
- 3 Press the **ENTER** (\rightarrow) button.
Result: The **Product Information** is selected.
- 4 Press the **ENTER** (\rightarrow) button again.
Result: The product information menu is displayed.
 - **Product Name**
 - **Software Version**
 - **Firmware Version**
 - **Hardware Version**
- 5 Press the **D.MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.

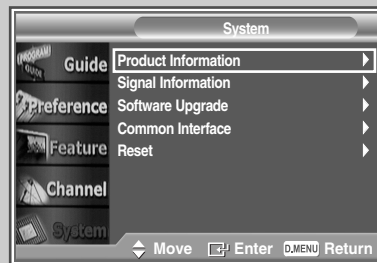






Checking the Signal Information

You can get information about the signal status.

- 1 Press the **D.MENU** button.
Result: The DTV menu is displayed.
- 2 Press the **▲** or **▼** button to select **System**.
Result: The **System** menu is displayed.
- 3 Press the **ENTER** (\rightarrow) button.
- 4 Press the **▲** or **▼** button to select **Signal Information**. Press the **ENTER** (\rightarrow) button.
Result: The technical information for signal status is displayed.
 - **Service**
 - **Service ID**
 - **Multiplex**
 - **Network**
 - **Bit Error Level**
 - **Signal Strength**
- 5 Press the **D.MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.

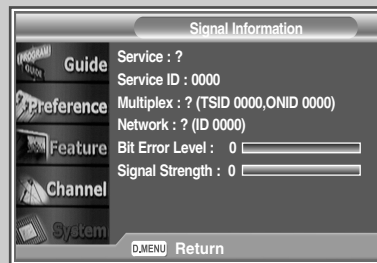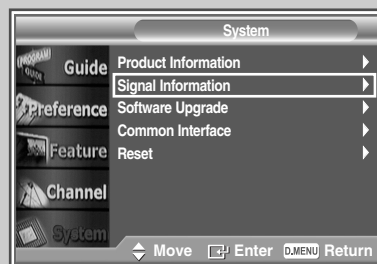

Upgrading the Software (Option)

  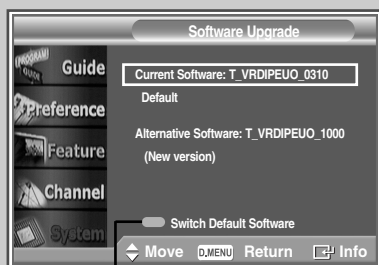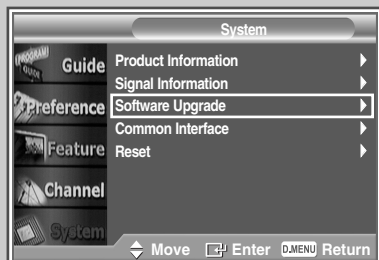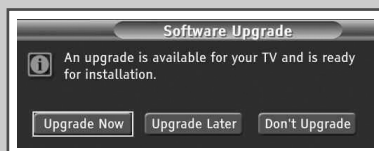

To keep your product up-to-date with new Digital Television features then software upgrades are periodically broadcast as part of the normal Television signal. It will automatically detect these signals and display the software upgrade banner. You are given the option to install the upgrade.

◆ Upgrade Now

If you select **Upgrade Now**, the iDTV immediately installs the new upgrade and then restarts.

◆ Upgrade Later

If you select **Upgrade Later**, the upgrade is postponed until the next restart or channel change some 90 minutes later, when the upgrade dialog appears again.


 

◆ Don't Upgrade




If you select **Don't Upgrade**, the iDTV does not perform the upgrade and the software upgrade banner is not displayed again. The upgrade is still stored internally, to subsequently upgrade to the new version then the following sequence of steps are performed.

- 1 Press the **D.MENU** button.
Result: The DTV menu is displayed.
- 2 Press the **▲** or **▼** button to select **System**.
Result: The **System** menu is displayed.
- 3 Press the **ENTER** (**↵**) button.
- 4 Press the **▲** or **▼** button to select **Software Upgrade**. Press the **ENTER** (**↵**) button.
Result: The information for **Software Upgrade** is displayed.
- 5 If necessary, press the **ENTER** (**↵**) button again to display the software version information.
- 6 Press the **D.MENU** button to return to the **Software Upgrade** menu.
- 7 To switch to an alternative version, press the red button. Press the blue button to reset, activate the upgrade and restart.
- 8 Press the **D.MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.




Viewing Common Interface

This contains information on CAM inserted in the CI slot and displays it.

- 1 Press the **D.MENU** button.
Result: The DTV menu is displayed.
- 2 Press the **▲** or **▼** button to select **System**.
Result: The **System** menu is displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▲** or **▼** button to select **Common Interface**.
Press the **ENTER** () button.
Result: The **Application Info.** is selected.
- 5 Press the **ENTER** () button to display the information for your application.
- 6 Press the **D.MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.

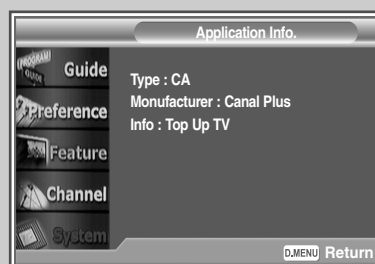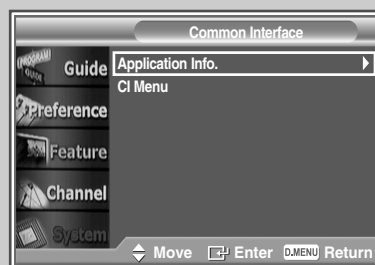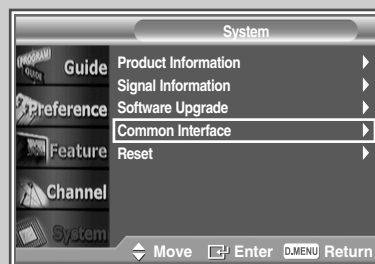

Selecting the CI (Common Interface) Menu

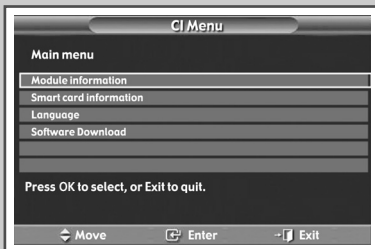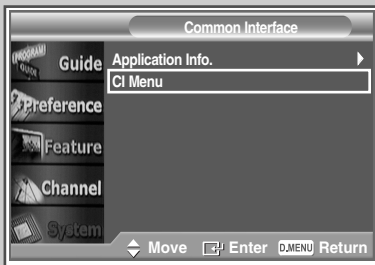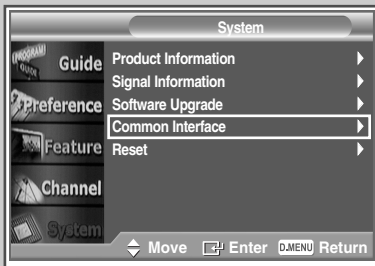

This helps the user select an item from the CAM-supported menu.

- 1 Press the **D.MENU** button.
Result: The DTV menu is displayed.
 - 2 Press the ▲ or ▼ button to select **System**.
Result: The **System** menu is displayed.
 - 3 Press the **ENTER** (↵) button.
 - 4 Press the ▲ or ▼ button to select **Common Interface**.
Press the **ENTER** (↵) button.
Result: The technical information for signal status is displayed.
 - 5 Press the ▲ or ▼ button to select **CI Menu**.
Press the **ENTER** (↵) button.
Result: The options of the selected menu are displayed.
 - 6 Select the required option by pressing the ▲ or ▼ button.
Press the **ENTER** (↵) button.
 - 7 Press the **D.MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.
-
- Select the CI Menu based on the menu PC Card.
 - In the case of DTV mode, **OK** or **Select** can be used as the **ENTER** (↵) button.

Resetting

You can reset the values stored to the factory default values.

- The Reset operation deletes all channel information and user preferences returning all values to their default factory state.

- 1 Press the **D.MENU** button.

Result: The DTV menu is displayed.

- 2 Press the **▲** or **▼** button to select **System**.

Result: The **System** menu is displayed.

- 3 Press the **ENTER** (↵) button.

- 4 Press the **▲** or **▼** button to select **Reset**.
Press the **ENTER** (↵) button.

 


Result: The **Enter PIN** is displayed.

- 5 Enter your current 4-digit PIN code by using the numeric buttons (0~9).

Result: The warning message is displayed. All values will be reset by pressing the coloured buttons (red, green, yellow, and blue) in turn.

- 6 Press the **D.MENU** button to return to the previous menu or press the **EXIT** button to return to normal viewing.


- The default PIN number of a new TV set is "0-0-0-0".

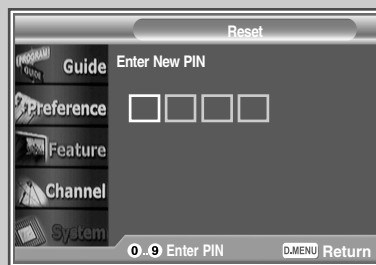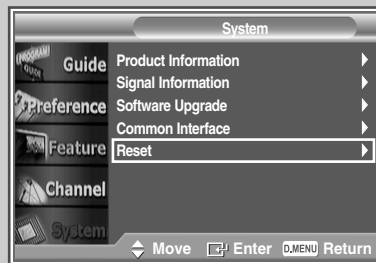


Freezing the Current Picture

You can freeze the picture when watching a television programme simply by pressing the "STILL" button. To return to normal viewing, press it again.

- This function will automatically cancel after 5 minutes.

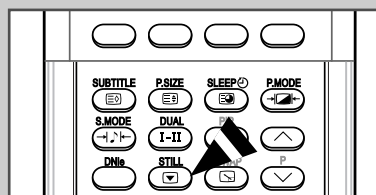

Teletext Feature

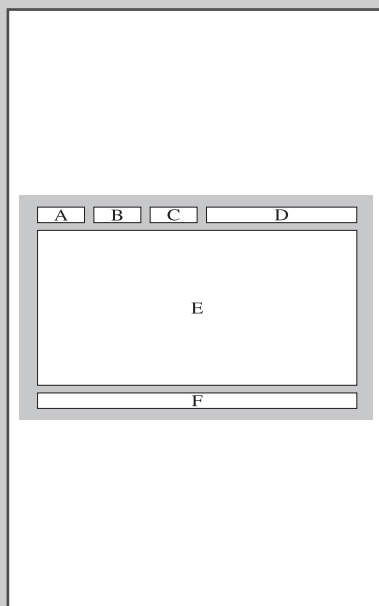

Most television channels provide written information services via teletext. Information provided includes:

- ◆ *Television programme times*
- ◆ *News bulletins and weather forecasts*
- ◆ *Sports results*
- ◆ *Travel information*

The teletext pages are organized according to six categories:

| Part | Contents |
|------|---|
| A | Selected page number. |
| B | Broadcasting channel identity. |
| C | Current page number or search indications. |
| D | Date and time. |
| E | Text. |
| F | Status information. FASTEXT information. |

- Teletext information is often divided between several pages displayed in sequence, which can be accessed by:
- ◆ Entering the page number
 - ◆ Selecting a title in a list
 - ◆ Selecting a coloured heading (FASTEXT system)


Displaying the Teletext Information

You can display Teletext information at any time on your television.


☞ For Teletext information to be displayed correctly, channel reception must be stable; otherwise:

- ◆ Information may be missing
- ◆ Some pages may not be displayed

- 1 Select the channel providing the Teletext service by pressing the **P** (↺) or (↻) button.
- 2 Press the **TEXT/MIX** (≡|≡) button to activate the teletext mode.
Result: The contents page is displayed. It can be redisplayed at any time by pressing the (≡i) (index) button.
- 3 Press the **TEXT/MIX** (≡|≡) button again.
Result: The screen will be split into two.
This Double Teletext feature lets you view the actual broadcast and teletext information separately on the screen.
- 4 If you wish to display the actual broadcast and teletext information on a single screen, press the **TEXT/MIX** (≡|≡) button again.
- 5 Press the **TV** or **DTV** button to exit from the teletext display.

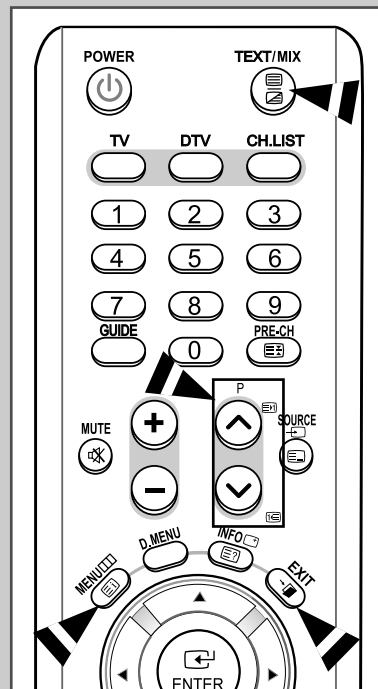

Selecting Display Options

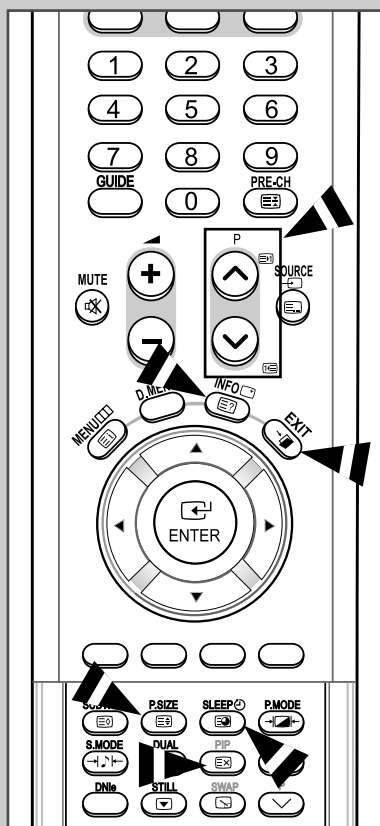





When you have displayed a Teletext page, you can select various options to suit your requirements.


| To display... | Press the... |
|--|---|
| ◆ Hidden text (answers to quiz games, for example) | [REVEAL] (reveal) |
| ◆ The normal screen | [REVEAL] (reveal) again |
| ◆ A secondary page | [SUB-PAGE] (sub-page) |
| ◆ The broadcast when searching for a page | [CANCEL] (cancel) |
| ◆ The next page | [PAGE UP] (page up) |
| ◆ The previous page | [PAGE DOWN] (page down) |
| ◆ Double-size letters in the: <ul style="list-style-type: none"> • Upper half of the screen • Lower half of the screen | [SIZE] (size) <ul style="list-style-type: none"> • Once • Twice |
| ◆ Normal screen | <ul style="list-style-type: none"> • Three times |

- To return to the normal display after using the reveal or size feature, press the **TV** or **DTV** button.
- To return to the normal display after using the reveal or size feature, press the **TV** or **DTV** button.

Selecting a Teletext Page

You can enter the page number directly by pressing the numeric buttons on the remote control.




- 1 Enter the three-digit page number given in the content by pressing the corresponding numeric buttons.
Result: The current page counter is increased by one and the page is then displayed. If the selected page is linked with several secondary pages, the secondary pages are displayed in sequence. To freeze the display on a given page, press the  (hold). Press it again to resume.
- 2 If the FASTEXT system is used by a broadcasting company, the different topics covered on a Teletext page are colour-coded and can be selected by pressing the coloured buttons on the remote control.
Result: The page is displayed with other coloured information that can be selected in the same way.
- 3 To display the previous or next page, press the corresponding coloured button.
- 4 To display the sub-page, see the following steps.
 - ◆ Press the  (sub-page) button.
Result: The available sub-pages appear.
 - ◆ Select the required sub-page. Sub-pages can be scrolled by pressing the  or  button.
- 5 When you have finished, press the **TV** or **DTV** button to return to your normal broadcast.

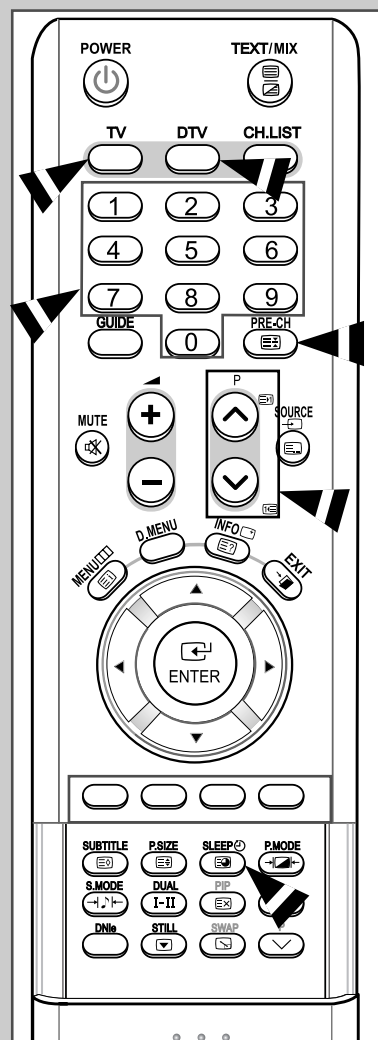

Connecting to External Input/Output

“EXT 1” is used for the equipment with an RGB output, such as video game devices or video disc players.

Rear of the TV

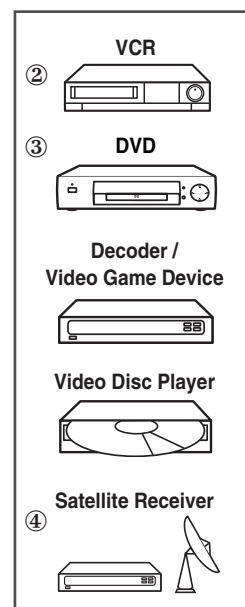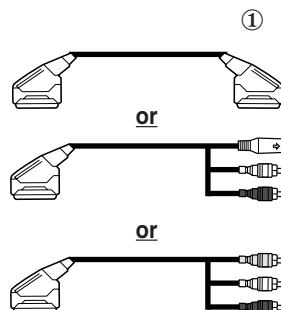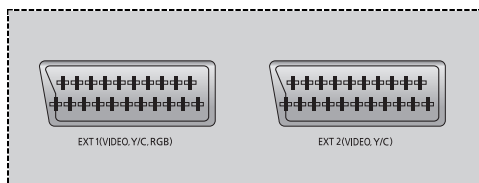

- ① This end can be fitted with:
 - ◆ A SCART connector
 - ◆ An S-Video connector and two audio RCA connectors (L+R); **EXT 2**
 - ◆ Three RCA connectors (VIDEO + AUDIO-L and R)
- ② If you have a second VCR and wish to copy cassette tapes, connect the source VCR to **EXT 1** and the target VCR to **EXT 2** so that you can redirect the signal from **EXT 1** to **EXT 2**.
- ③ If you have a decoder, connect the decoder to the VCR and the VCR to the television.
- ④ When you wish to record a programme, connect the receiver to **EXT 1** and the VCR to **EXT 2** so that you can redirect the signal from **EXT 1** to **EXT 2**.

➤ Please be sure to match the colour coded input terminals and cable jacks.

Input/Output Specification

| Connector | Input | | | | Output |
|--------------|-------|-------------|---------|-----|-------------------------------------|
| | Video | Audio (L/R) | S-Video | RGB | Video + Audio (L/R) |
| EXT 1 | ✓ | ✓ | ✓ | ✓ | Only TV or DTV output is available. |
| EXT 2 | ✓ | ✓ | ✓ | | Output you can choose. |




Whenever you connect an audio or video system to your television, ensure that all elements are switched off.

Refer to the documentation supplied with your equipment for detailed connection instructions and associated safety precautions.

Connecting to the AV Output


“AV OUT” are used for the equipment with an RGB output, such as video game devices or video disc players.

Rear of the TV

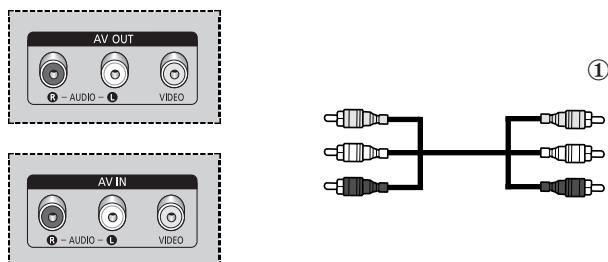

- ① This end can be fitted with:
 - ◆ Three RCA connectors (VIDEO + AUDIO L/R)
- ② If you have a second VCR and wish to copy cassette tapes, connect the source VCR to “AV IN” and the target VCR to “AV OUT” so that you can redirect the signal from “AV IN” to “AV OUT”.
- ③ When you wish to record a programme, connect the receiver to “AV IN” and the VCR to “AV OUT” so that you can redirect the signal from “AV IN” to “AV OUT”.



➤ Please be sure to match the colour coded input terminals and cable jacks.

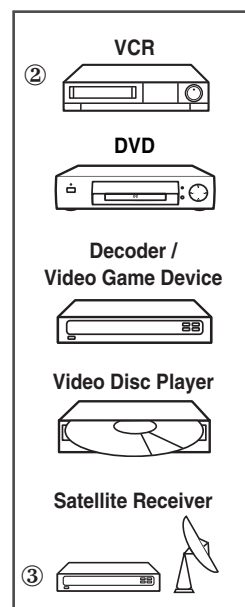

Connecting to the RCA Input

- The RCA (**VIDEO + AUDIO L/R**) connectors are used for equipment, such as camcorders, video disc players, and some video game devices.

  Rear of the TV



Camcorder



Video game device



Video disc player





- Please be sure to match the colour coded input terminals and cable jacks.

Connecting to the S-Video Input

- The **S-VIDEO** and **AUDIO L/R** connectors are used for equipment with an S-Video output, such as a camcorder or VCR.

Rear of the TV

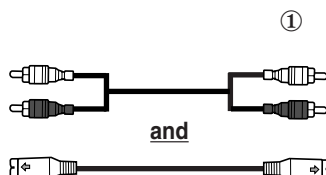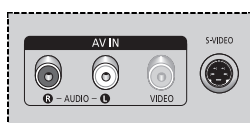

Camcorder



VCR



- ① To play pictures and sound, both the **S-VIDEO** and **AUDIO L/R** connectors must be used.




- Please be sure to match the colour coded input terminals and cable jacks.



Whenever you connect an audio or video system to your television, ensure that all elements are switched **off**. Refer to the documentation supplied with your equipment for detailed connection instructions and associated safety precautions.

Connecting to the Component Input

Rear of the TV

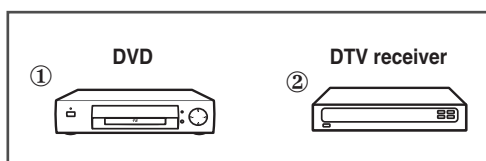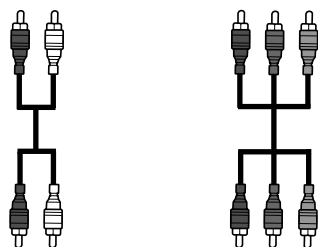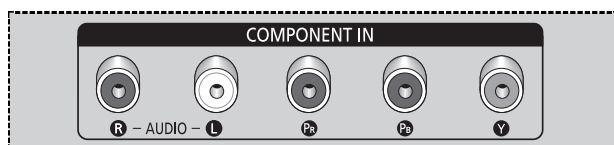



The **COMPONENT IN** connectors are used for equipment with a DVD or DTV receiver output.
(480i/480p/576i/576p/1080i)

➤ Please be sure to match the colour coded input terminals and cable jacks.

Connecting to the PC Input

➤ The "**PC IN**" (video) and "**AUDIO**" connectors are used for interfacing with your PC.

 Rear of the TV

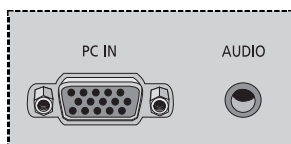


Personal Computer




Connecting to the HDMI Input

- The “HDMI/DVI IN” connector is used for equipment with an HDMI out.

Rear of the TV

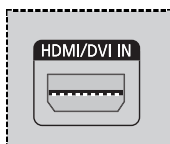


DTV Set-Top Box

 


Connecting to the HDMI/DVI Compatible

- The “HDMI/DVI IN” connector is used for equipment with a DVI out.


Rear of the TV

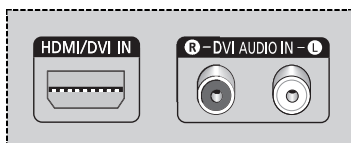


and

 

DTV Set-Top Box

 

Connecting to the Common Interface

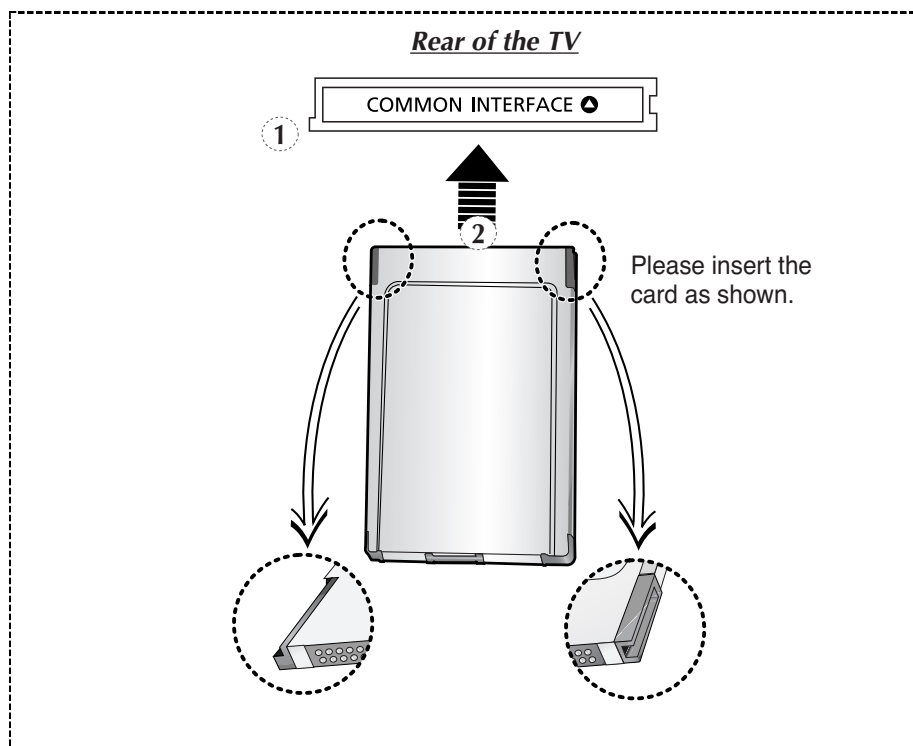

① COMMON INTERFACE

PCMCIA Slot supports the DVB Common Interface (DVB-CI) standard.

This connection is provided for future expansion of your Samsung DTV set allowing the installation of DVB-CI compatible peripherals, for example a DVB-CI module to support pay TV services. The availability of DVB-CI peripherals varies country by country.

Please contact your retailer for information about the availability of DVB-CI peripherals in your region.



② Inserting the CI (Common Interface) CARD

If you want to watch the scrambled channel, insert the CI CARD into the "COMMON INTERFACE" slot.


Connecting Home Theater System

Use the “**AV OUT**” ports of the PDP for Home Theater System Connections.

Rear of the TV

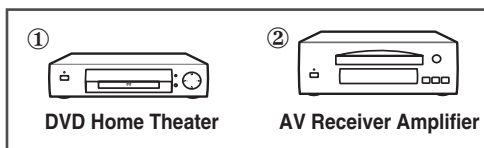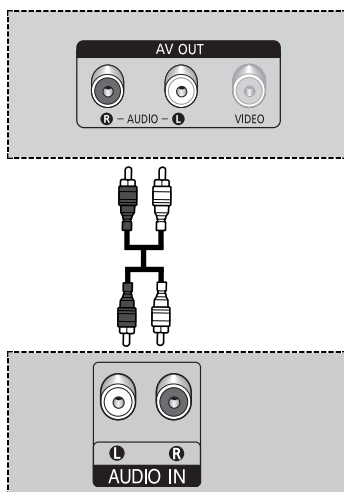


Connecting the Home Theater System

- ① Connect the monitoring audio out L and R jacks of the **AV OUT** on the rear-side connection panel of the PDP TV to the **AUDIO IN** jacks of the DVD Home Theater System (or AV Receiver) using the audio cable.
- ② Press the **SOURCE** () button to select the desired external device connected to the PDP TV.
- ③ If you want to hear the sound through separate speakers, cancel the internal amplifier.

➤ Please be sure to match the colour coded input terminals and cable jacks.

- ◆ Refer to corresponding user's manual from the manufacturer for wiring the speakers to the DVD Home Theater System (or AV Receiver).
- ◆ Disable the PDP TV internal speaker to enjoy the rich sound through the speakers of your Home Theater System.

To Display the DVD Home Theater


- ① Turn the PDP on and press the **SOURCE** () button to select the **Ext.1**, **Ext.2**, or **Component**.
- ② Be sure to connect the video cable properly if desired external input (**Ext.1**, **Ext.2**, or **Component**) cannot be selected.
- ③ Play the DVD after activating the DVD Home Theater System.
- ④ Use the volume control of the Home Theater System while watching the PDP using the DVD Home Theater, where the PDP TV does not produce the audio.

Setting up Your PC Software (Windows only)

The Windows display-settings for a typical computer are shown below. But the actual screens on your PC will probably be different, depending upon your particular version of Windows and your particular video card. But even if your actual screens look different, the same, basic set-up information will apply in almost all cases. (If not, contact your computer manufacturer or Samsung Dealer.)



- 1 Right click the mouse on the Windows Desktop, then click on **Properties**.
The **Display Properties** will be displayed.

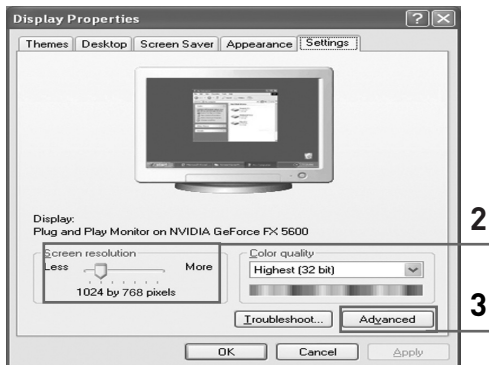

- 2 Click on **Settings** tab, then set the Display Mode with reference to the Display Modes Table. You do not need to change the Colours settings.
- 3 Click on **Advanced**. A new settings dialog box will be displayed.
- 4 Click on the **Monitor** tab, then set the **Screen refresh rate** with reference to the Display Modes Table. Set the Vertical Frequency and Horizontal Frequency individually if you can do so instead of setting the **Screen refresh rate**.
- 5 Click on **OK** to close the window, then Click on **OK** button to the **Display Properties** window. Automatic re-booting may commence at this moment.



- 6 Shutdown the PC, and connect it to your TV. ("Connecting to the PC Input" on page 81)
- ♦ The actual screens on your PC may look different, depending on your particular version of Windows and the type of your PC.
 - ♦ When you use your TV as a PC monitor, it supports Colours up to 32 bits.
 - ♦ In this case, the display on the TV may look different depending on your particular version of Windows or the PC manufacturer.
 - ♦ When connecting a PC (including the HDMI connection), you must set it to the display settings that are supported by the TV. Otherwise, the message **Out of input range** will be displayed.

Input Mode (PC)


Both screen position and size will vary depending on the type of PC monitor and its resolution.
The table below shows all of the display modes that are supported:

| Video Signal | Resolution (Dot X Line) | Vertical frequency (Hz) | Horizontal frequency (kHz) | Vertical polarity | Horizontal polarity |
|---------------------------|----------------------------|----------------------------|-------------------------------|----------------------|------------------------|
| IBM PC / AT Compatible | 640 x 350 | 70.086 | 31.469 | P | N |
| | 720 x 400 | 70.087 | 31.469 | N | P |
| | 640 x 480 | 59.940 | 31.469 | N | N |
| | | 70.000 | 35.000 | N/P | N/P |
| | | 72.809 | 37.861 | N | N |
| | | 75.000 | 37.500 | N | N |
| | 800 x 600 | 56.250 | 35.156 | N/P | N/P |
| | | 60.317 | 37.879 | P | P |
| | | 70.000 | 43.750 | N/P | N/P |
| | | 72.188 | 48.077 | P | P |
| | 848 x 480 | 75.000 | 46.875 | P | P |
| | | 60.000 | 31.020 | P | P |
| | | 74.769 | 37.684 | P | N |
| | 1024 x 768 | 60.004 | 48.363 | N | N |
| | | 70.069 | 56.476 | N | N |
| | | 72.000 | 57.672 | N/P | N/P |
| | | 75.029 | 60.023 | P | P |

(N: Negative / P: Positive)

- ◆ The interlace mode is not supported.
- ◆ The television might operate abnormally if a non-standard video format is selected.
- ◆ 480i/p, 576i/p, 720p, or 1080i is not available in pc mode.

Notes

- ◆ The PC text quality is optimum in **WVGA** mode (848 x 480@60Hz).
- ◆ When this television is used as a PC display, 32-bit colour is supported.
- ◆ Your PC display screen might appear different depending on the manufacturer (and your particular version of Windows). Check your PC instruction book for information about connecting your PC to a television.
- ◆ If a vertical and horizontal frequency-select mode exists, select 60Hz (vertical) and 31.5kHz (horizontal). In some cases, abnormal signals (such as stripes) might appear on the screen when the PC power is turned off (or if the PC is disconnected). If so, press the **SOURCE** () button to enter the Video mode. Also, make sure that the PC is connected.
- ◆ When connecting a notebook PC to the television, make sure that the PC screen is displayed through only the television (Otherwise, random signals might appear).
- ◆ When horizontal synchronous signals seem irregular in PC mode, check PC power saving mode or cable connections.
- ◆ The Display Settings Table above complies to the IBM/VESA standards, and based on the analog input.
- ◆ The best timing for the vertical frequency to each mode is 60Hz.

Troubleshooting: Before Contacting Service Personnel

Before contacting Samsung after-sales service, perform the following simple checks.

If you cannot solve the problem using the instructions below, note the model and serial number of the television and contact the help desk at [0870-242-0303](tel:0870-242-0303) or dtvsupport@seri.co.uk.

| | |
|---|---|
| No sound or picture | <ul style="list-style-type: none">◆ Check that the mains lead has been connected to a wall socket.◆ Check that you have pressed the power button (On/Off) and the POWER (⏻) button.◆ Check the picture contrast and brightness settings.◆ Check the volume. |
| Normal picture but no sound | <ul style="list-style-type: none">◆ Check the volume.◆ Check whether the volume MUTE (🔇) button on the remote control has been pressed. |
| No picture or black and white picture | <ul style="list-style-type: none">◆ Adjust the colour settings.◆ Check that the broadcast system selected is correct. |
| Sound and picture interference | <ul style="list-style-type: none">◆ Try to identify the electrical appliance that is affecting the television, then move it further away.◆ Plug your television into a different mains socket. |
| Blurred or snowy picture, distorted sound | <ul style="list-style-type: none">◆ Check the direction, location and connections of your aerial. This interference often occurs due to the use of an indoor aerial. |
| Remote control malfunctions | <ul style="list-style-type: none">◆ Replace the remote control batteries.◆ Clean the upper edge of the remote control (transmission window).◆ Check the battery terminals. |
| Screen is black and power indicator light blinks steadily | <ul style="list-style-type: none">◆ On your computer check; Power, Signal Cable.◆ The TV is using its power management system.◆ Move the computer's mouse or press any key on the keyboard.◆ On your equipment check (STB, DVD, etc) ; Power, Signal Cable.◆ The TV is using its power management system.◆ Press the Source button on the panel or remote control.◆ Turn the TV off and on. |
| Slf the remote control doesn't work! | <ul style="list-style-type: none">◆ Is the TV power on?◆ Are the plus and minus ends of the batteries reversed?◆ Are the batteries drained?◆ Is there a power cut, or is the power cord unplugged?◆ Is there a special fluorescent light or a neon sign nearby? |

Memo

Memo

Memo

Memo

– AFTER SALES SERVICE

- Do not hesitate to contact your retailer or service agent if a change in the performance of your product indicates that a faulty condition may be present.




ELECTRONICS



Correct Disposal of This Product
(Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

 This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.